 


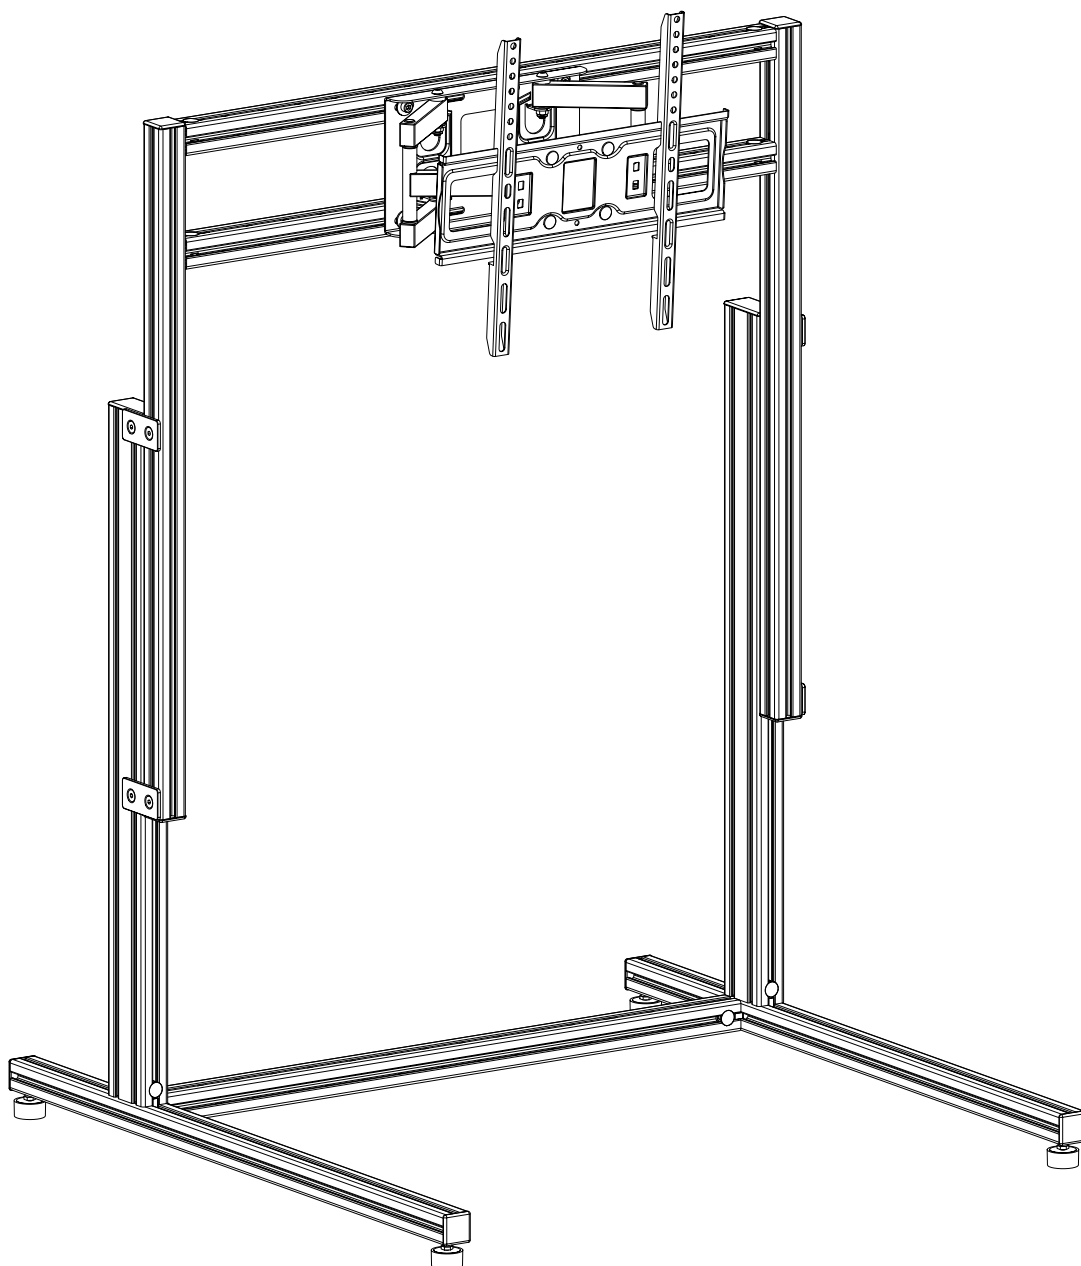


TV/MONITOR STAND

Instruction Manual
Bedienungsanleitung
Mode d'emploi


PARTS

 [dimensions in mm / different scales]
No extra or spare parts listed!

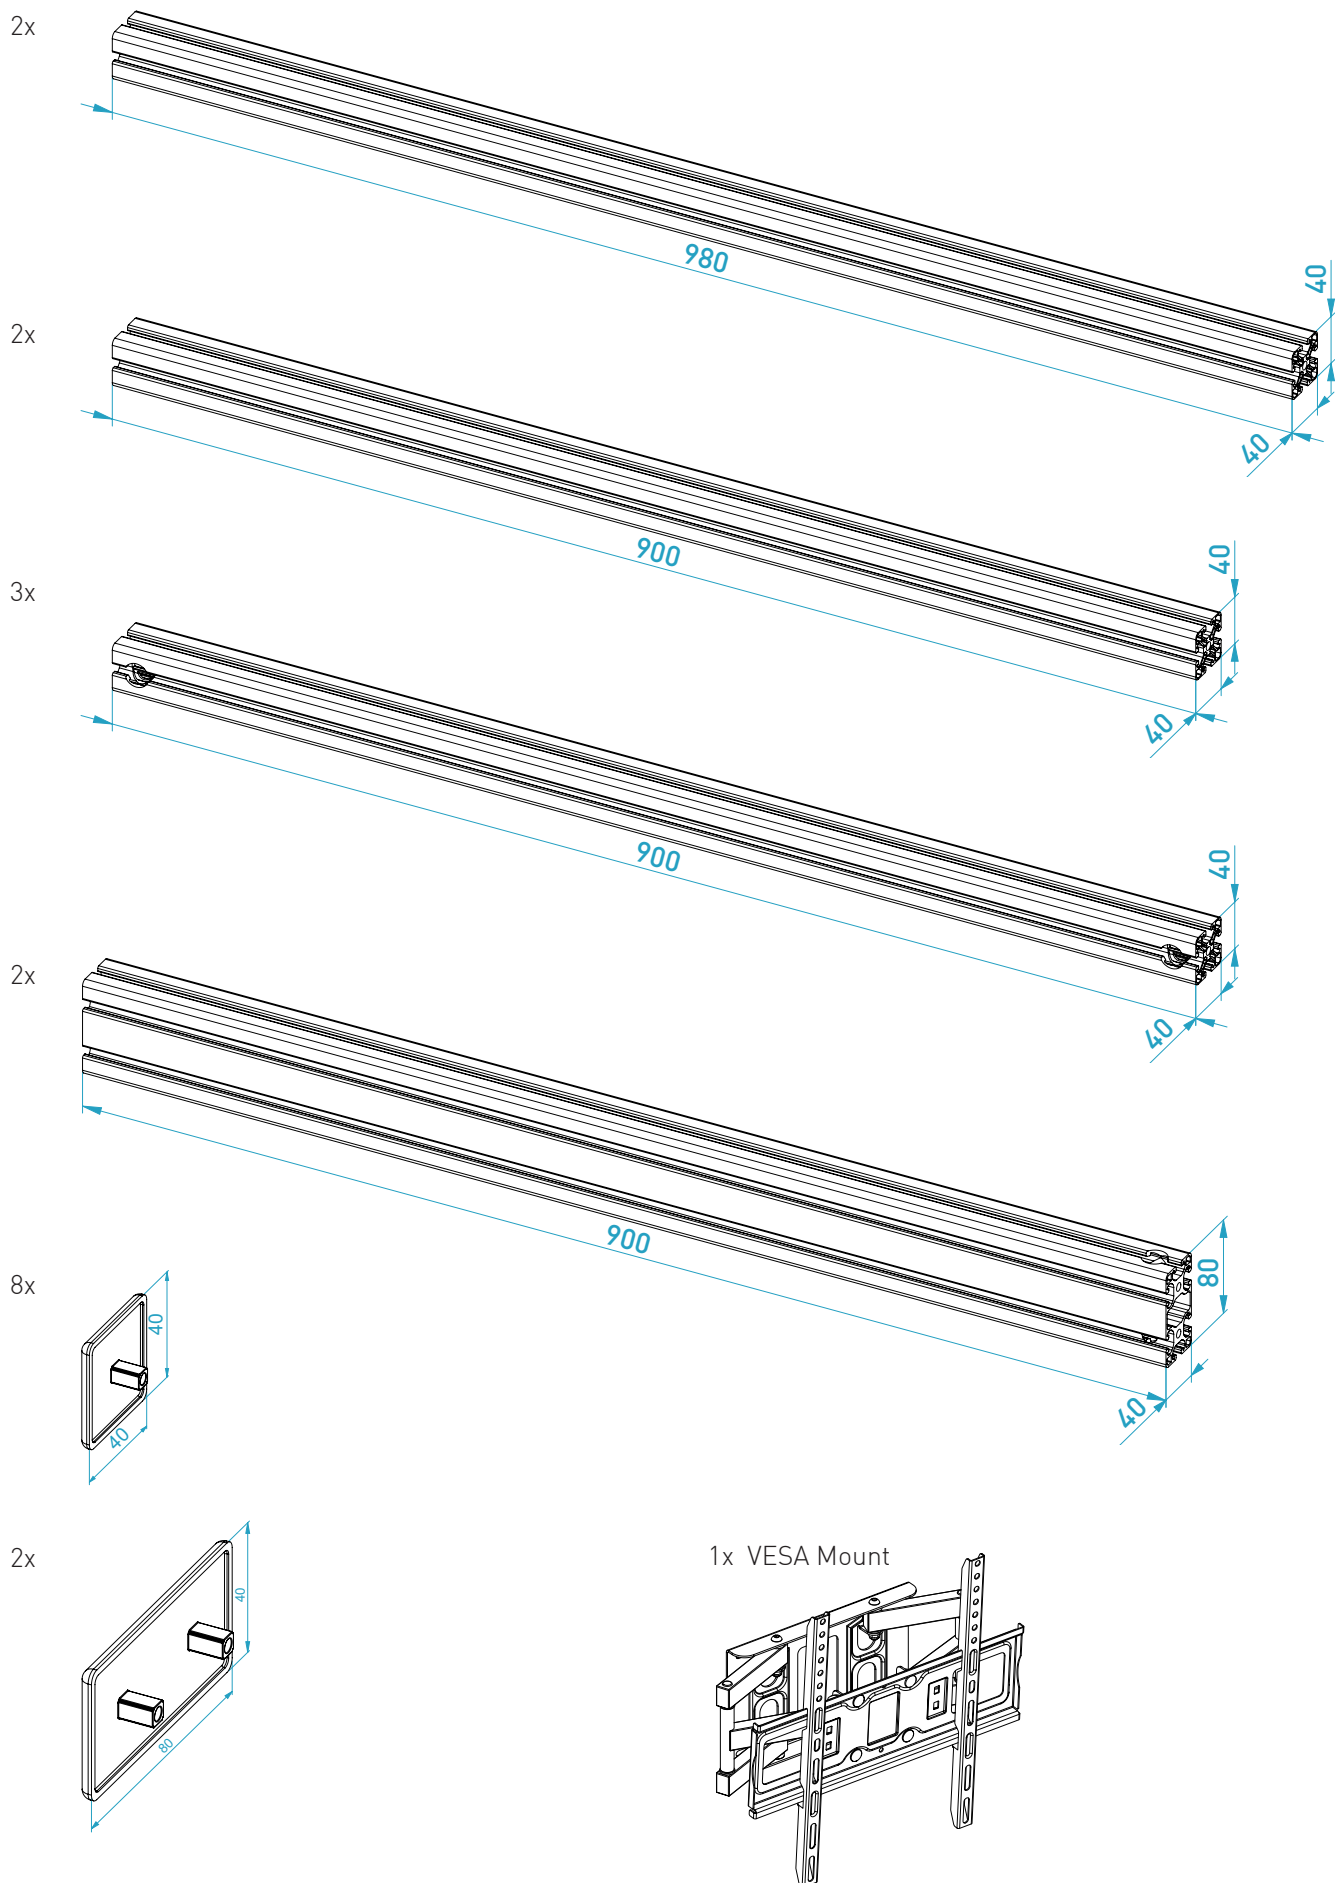


BAG 1

 
10x

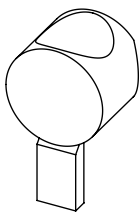

10x

 


10x

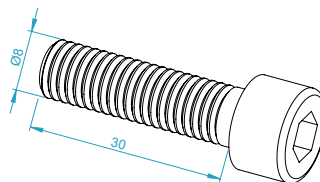 


BAG 2

 
4x

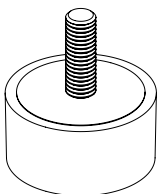


4x

 


4x

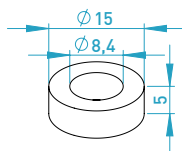 

4x

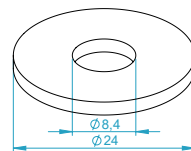 


4x

 


BAG 3

 
4x

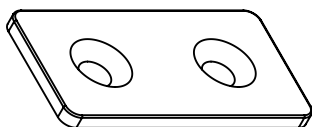

8x

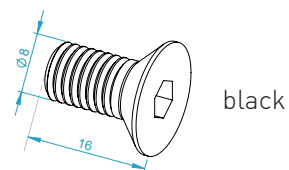 


8x

 


BAG 4

 
4x

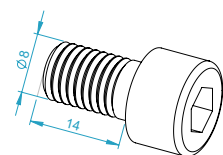




4x

 


4x

 





ASSEMBLY

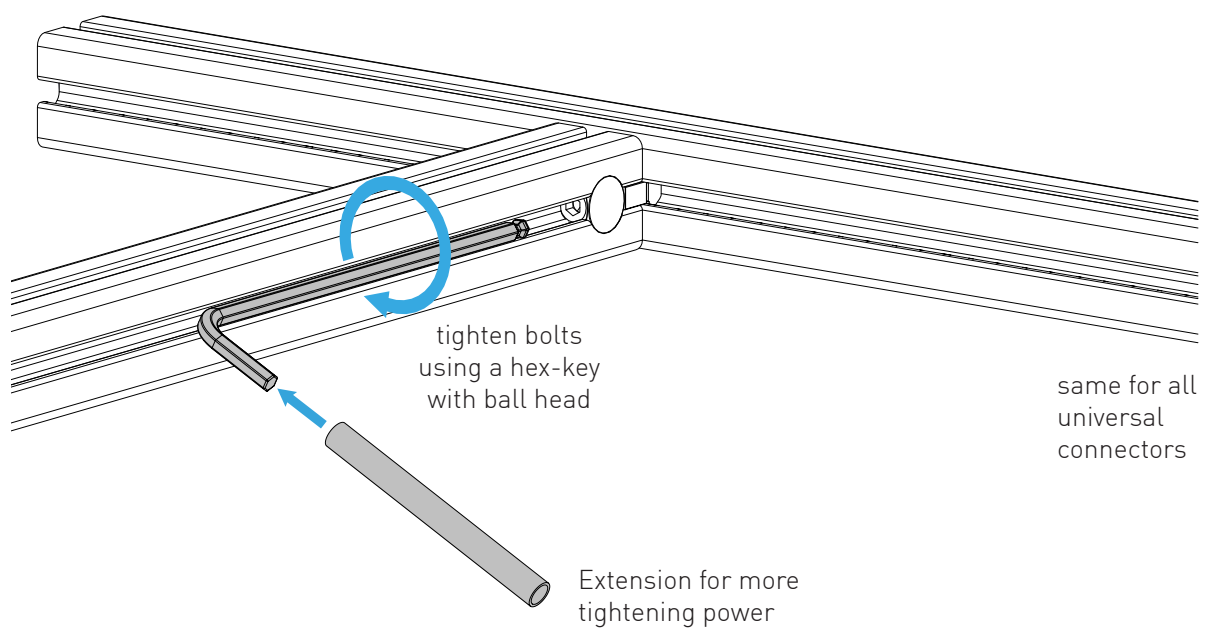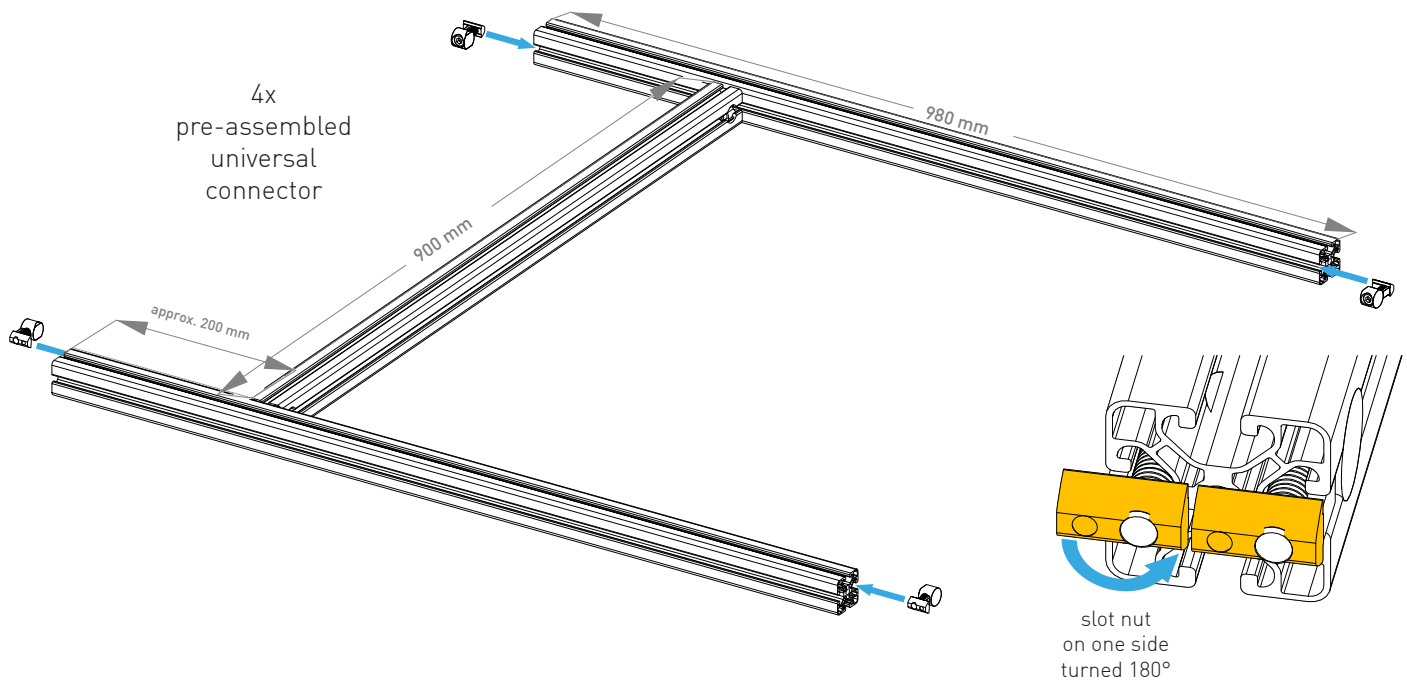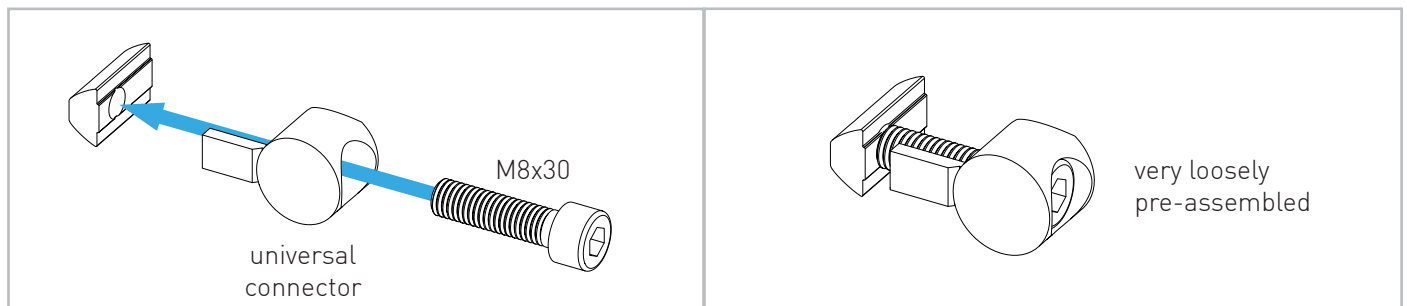   


Mounting the feet


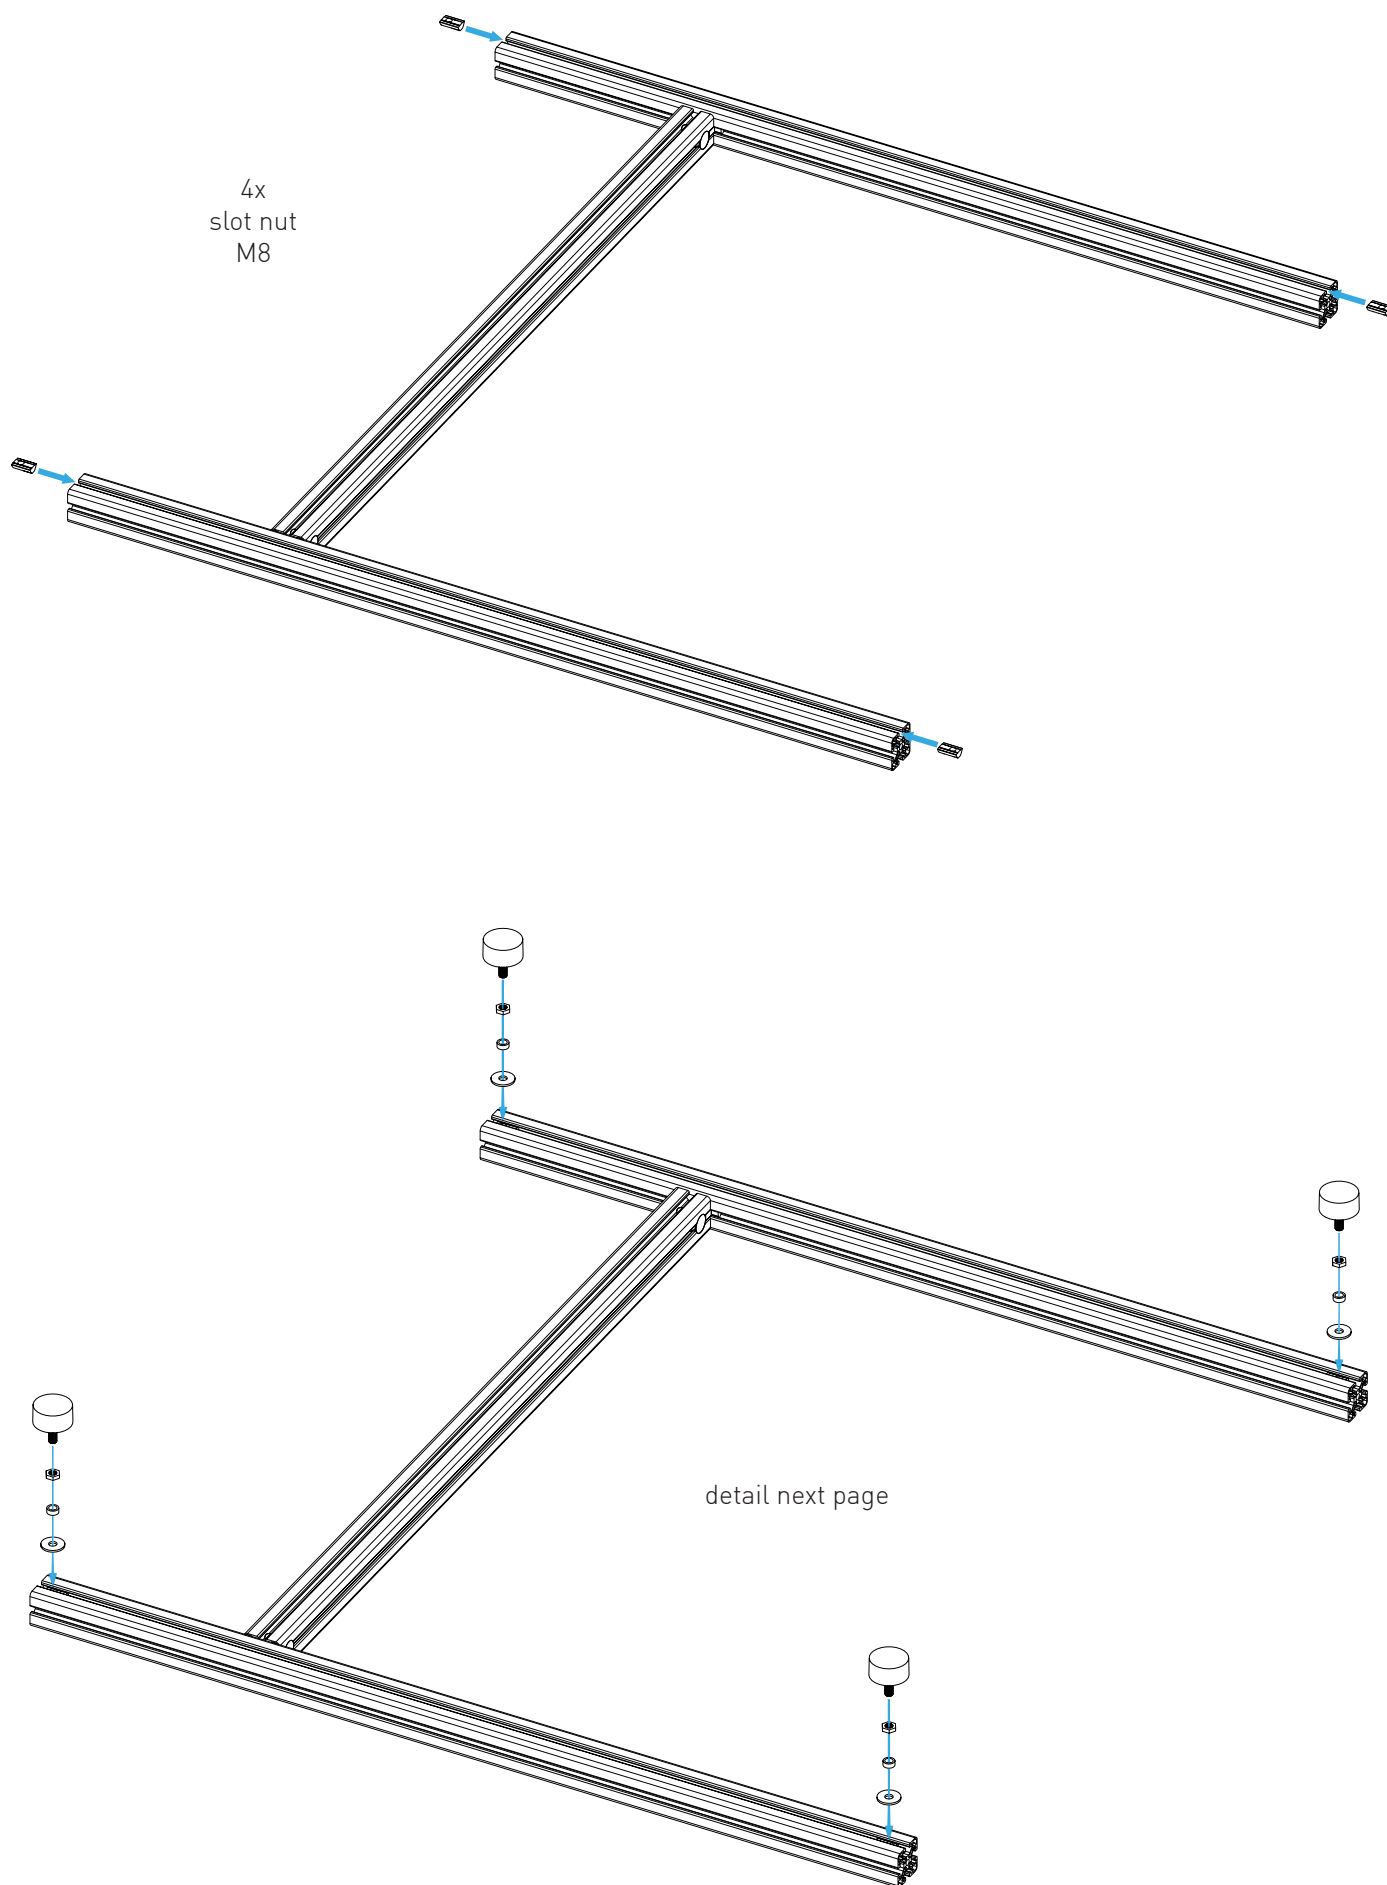 




4x

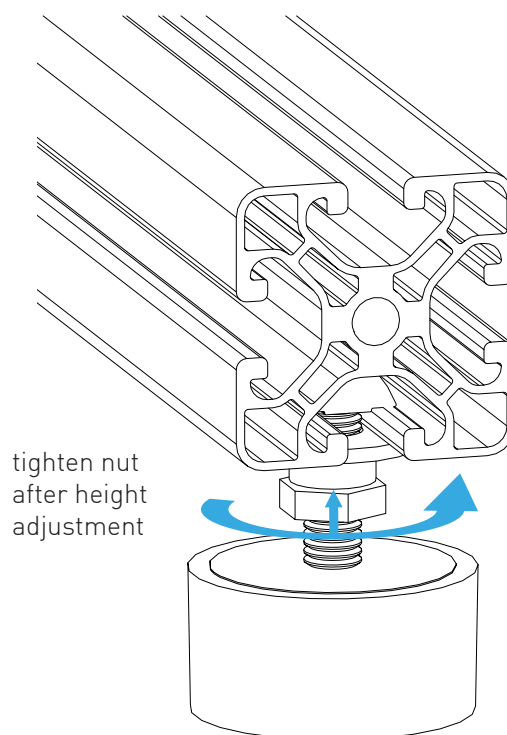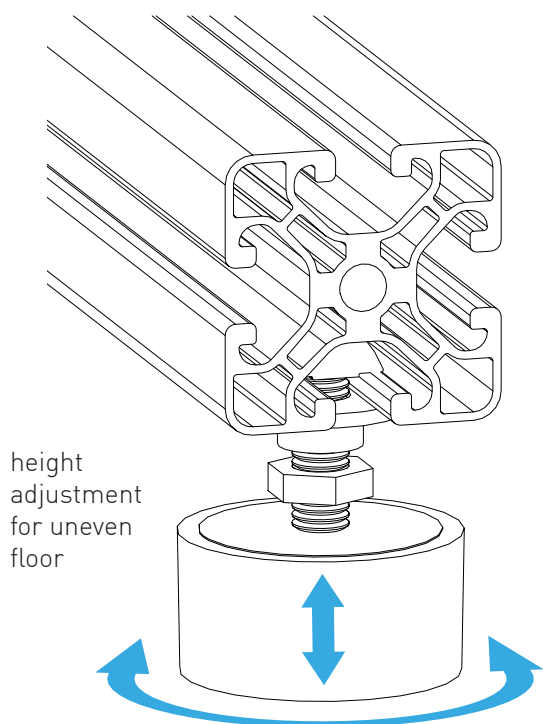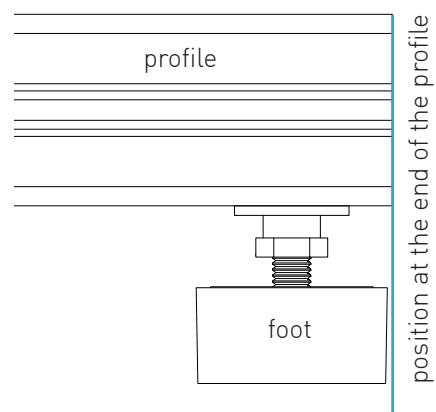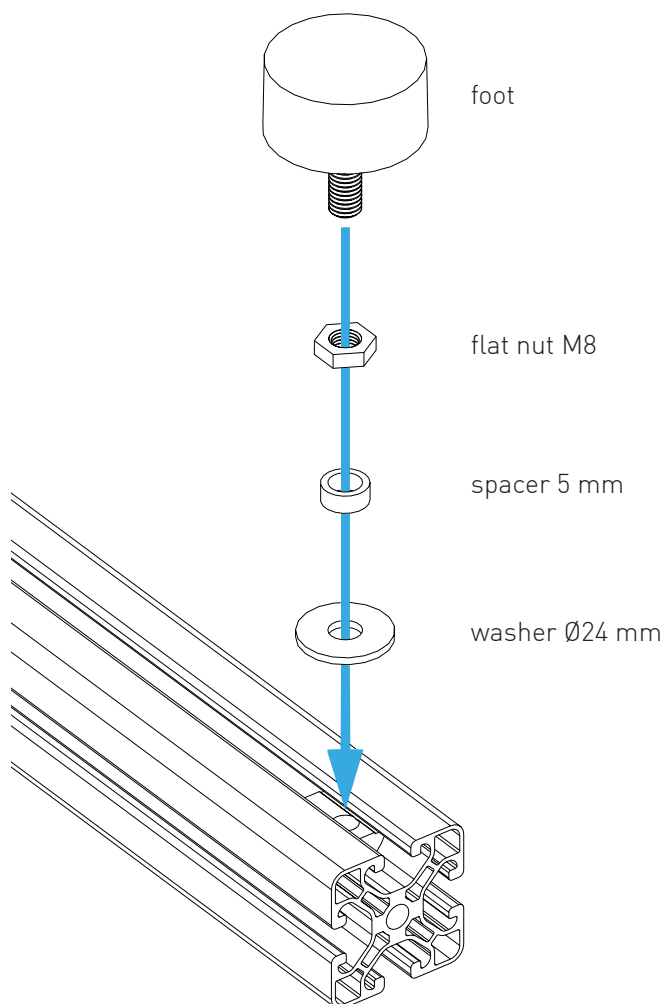    

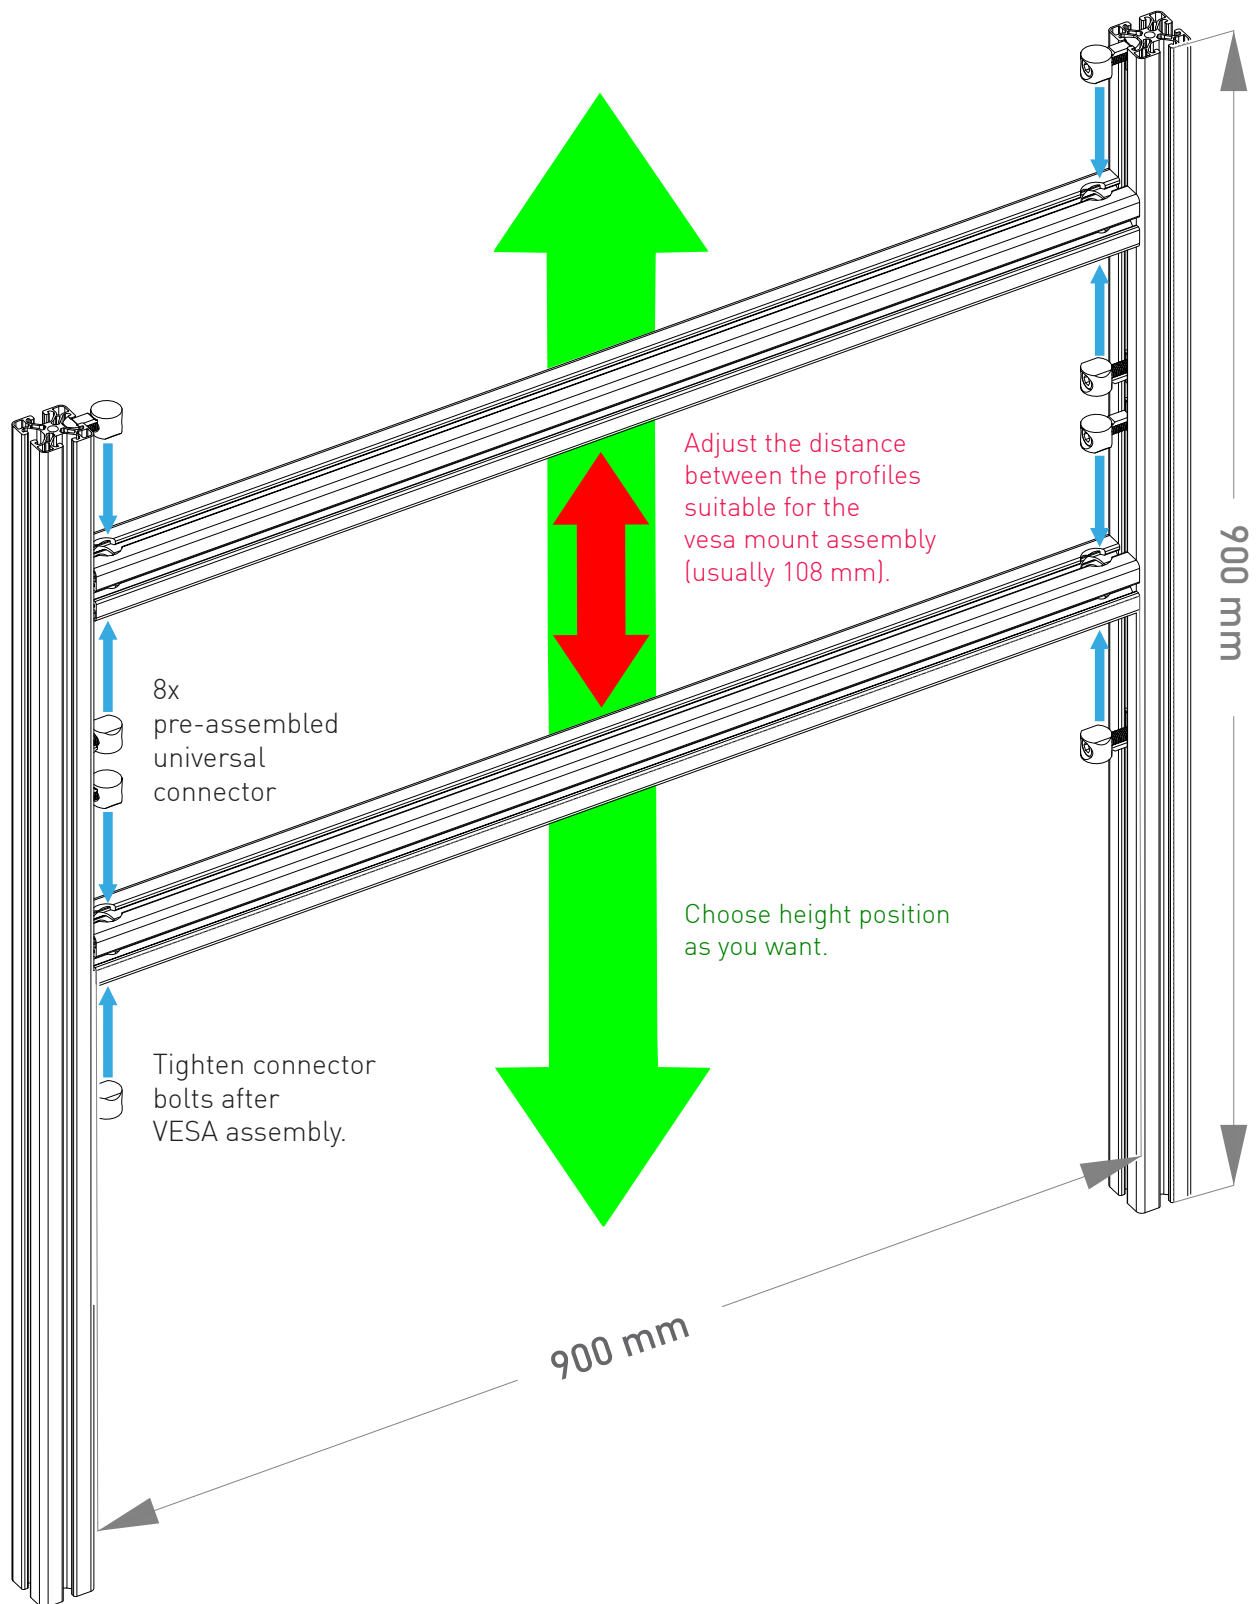 



Assembling the VESA mount

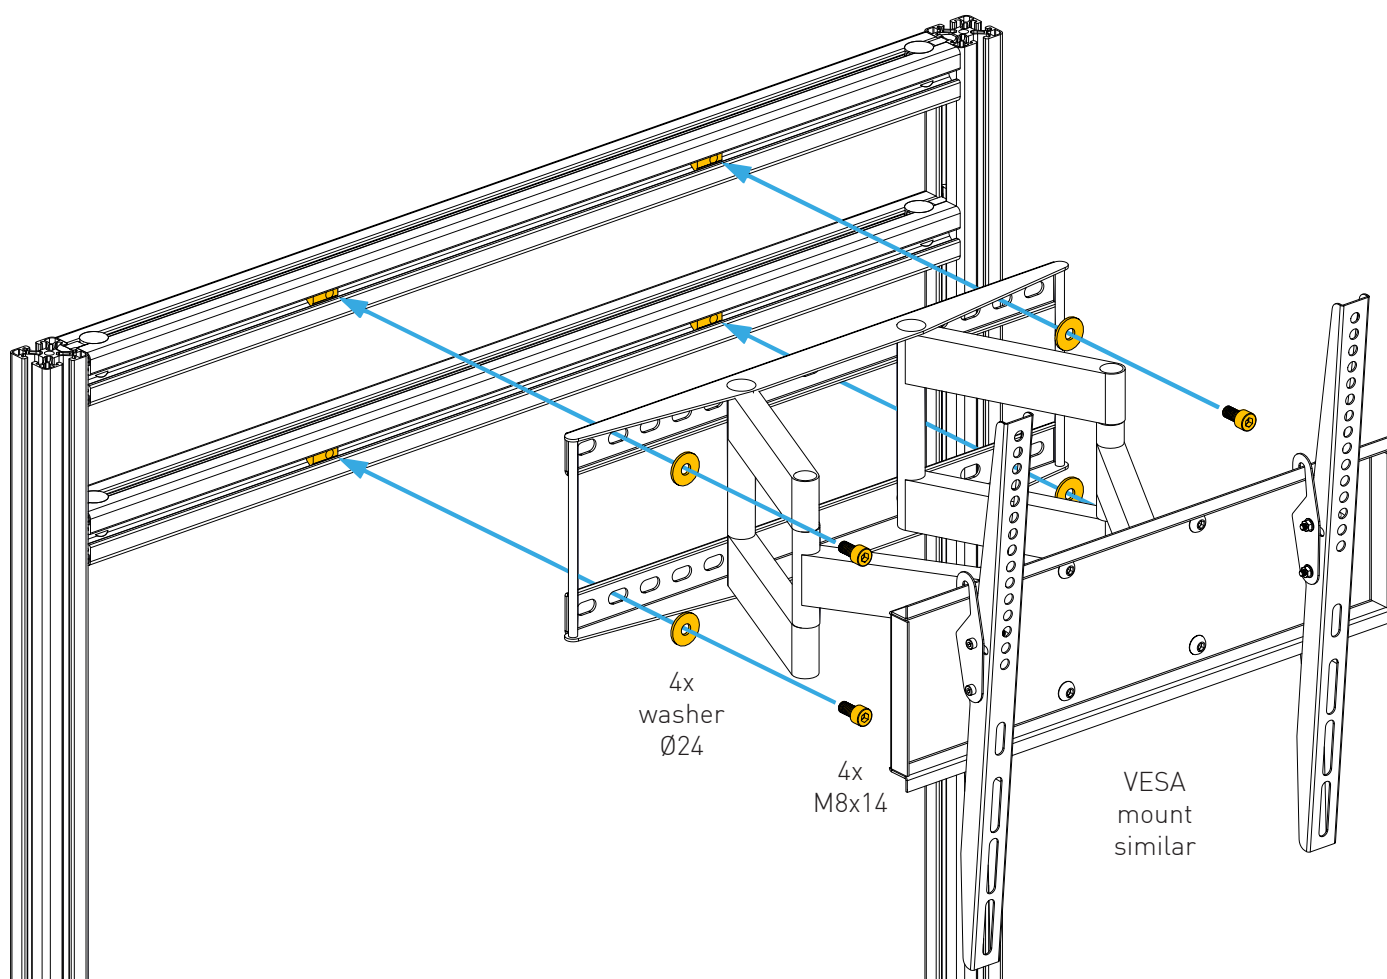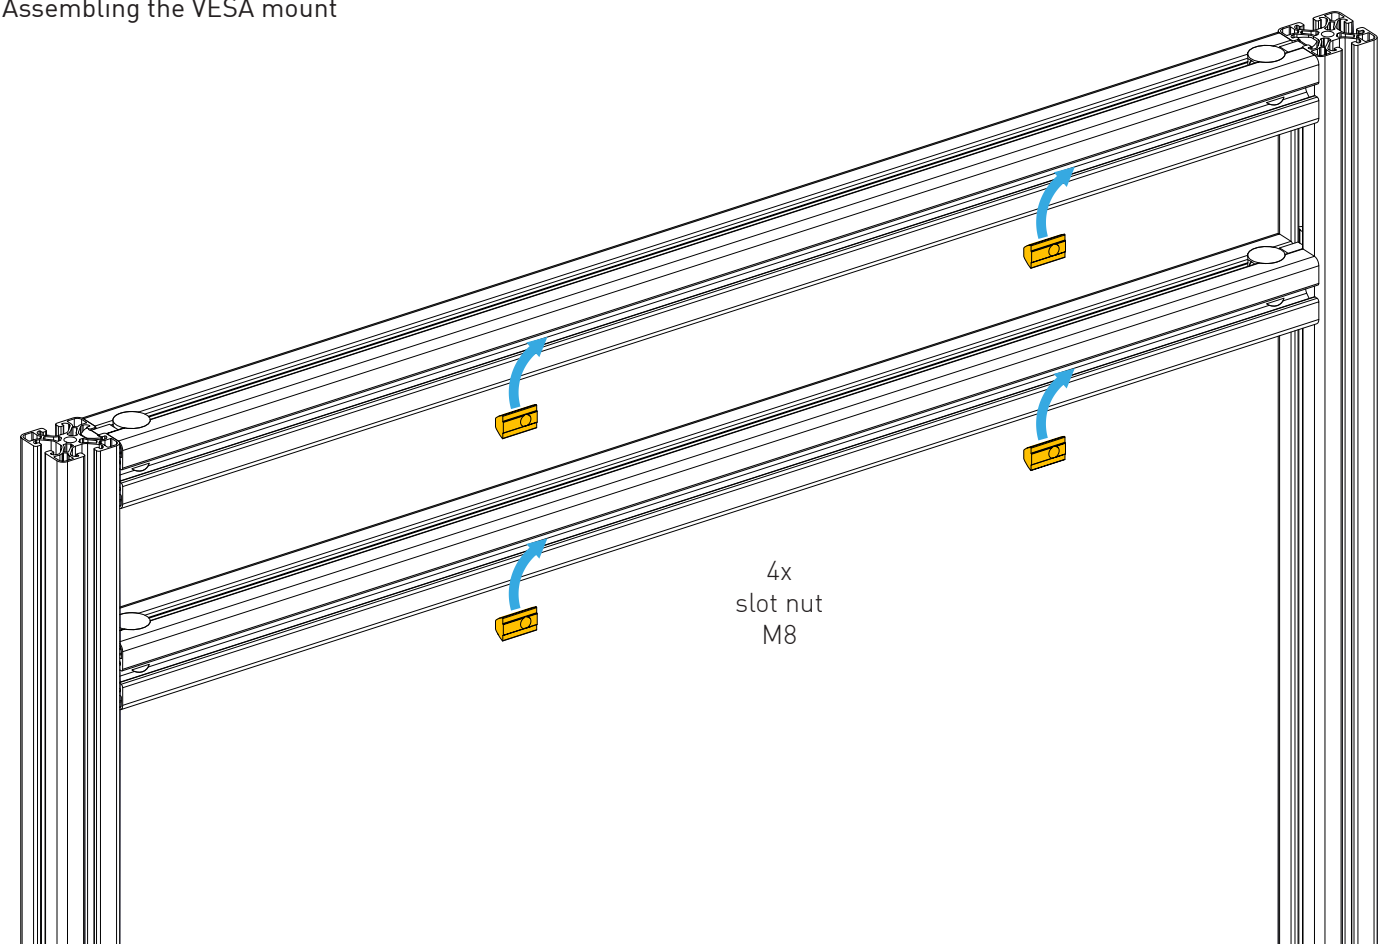  


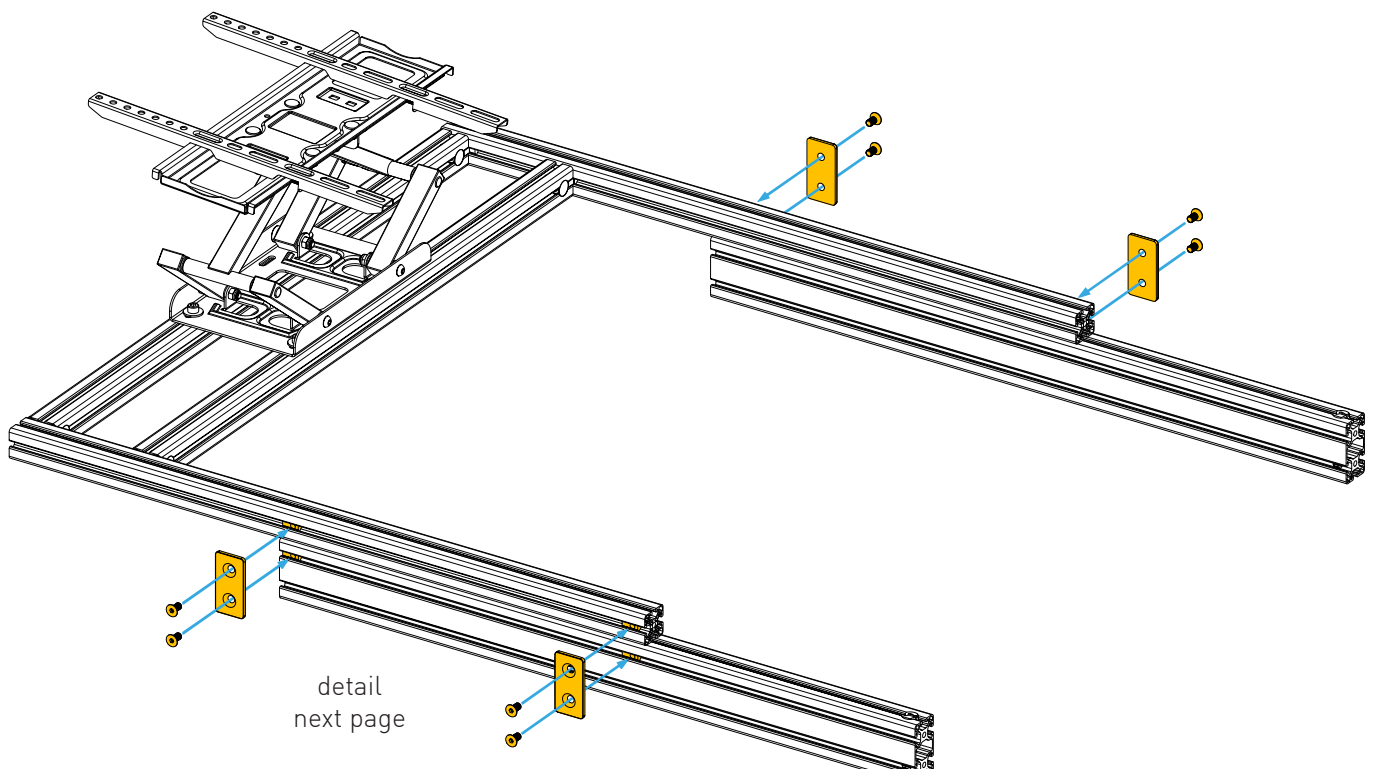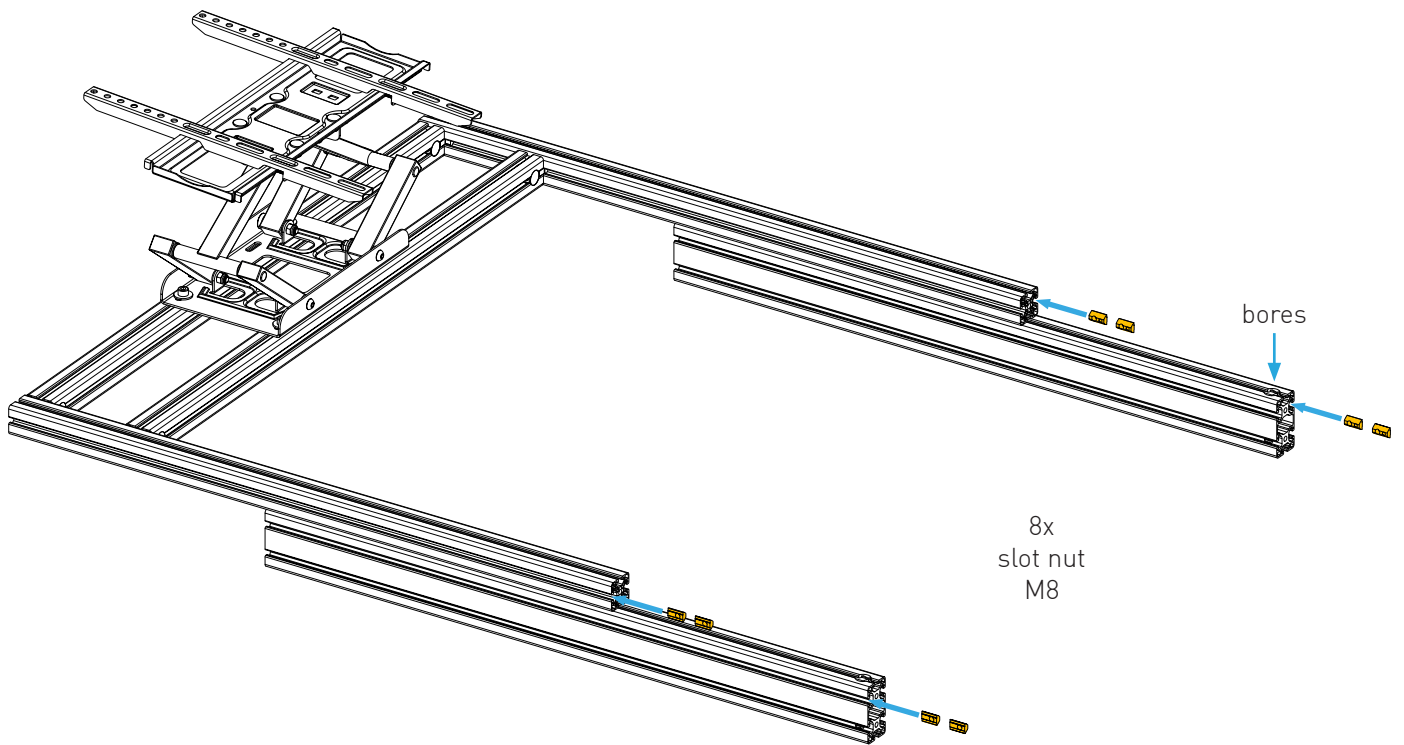  


For both sides
of the frame

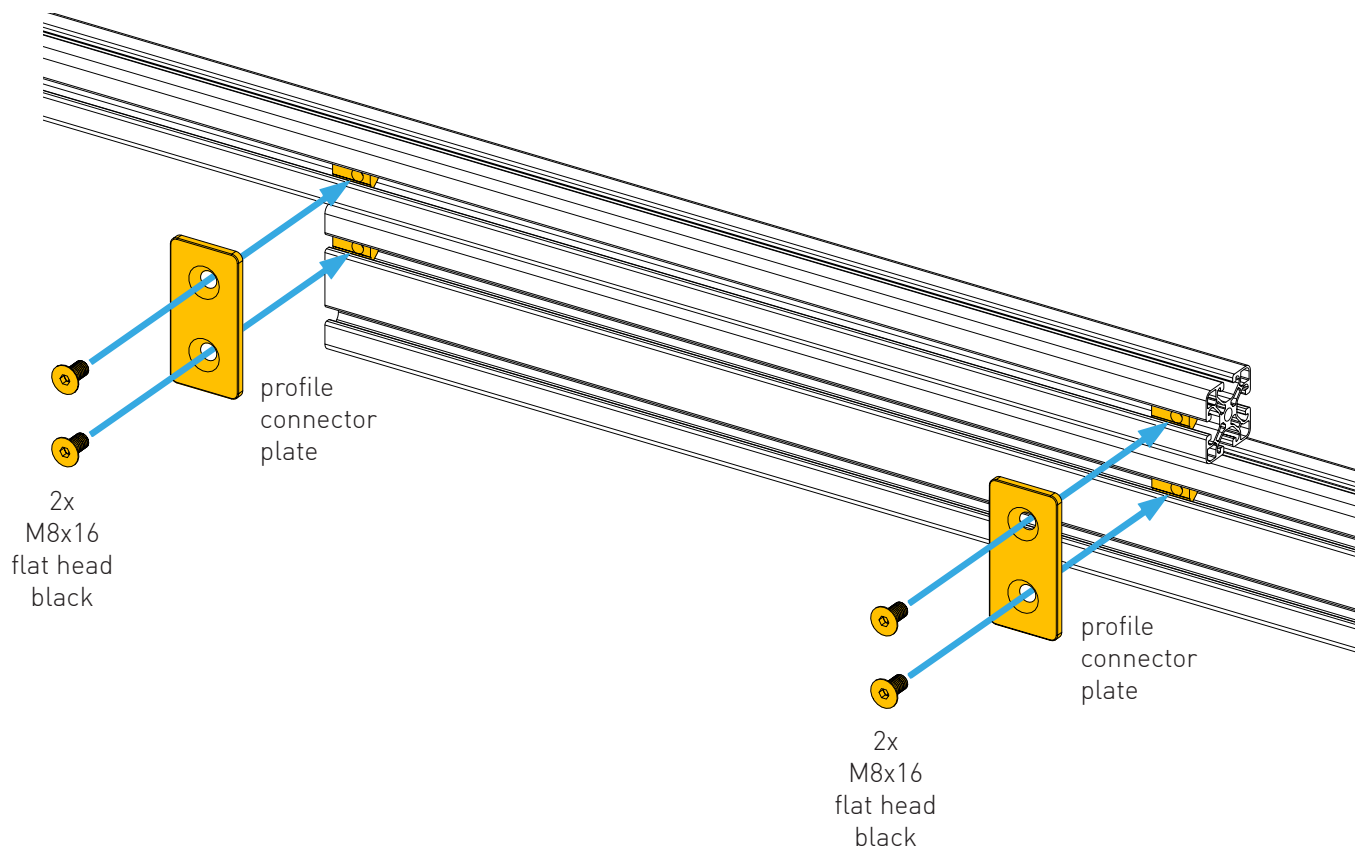 

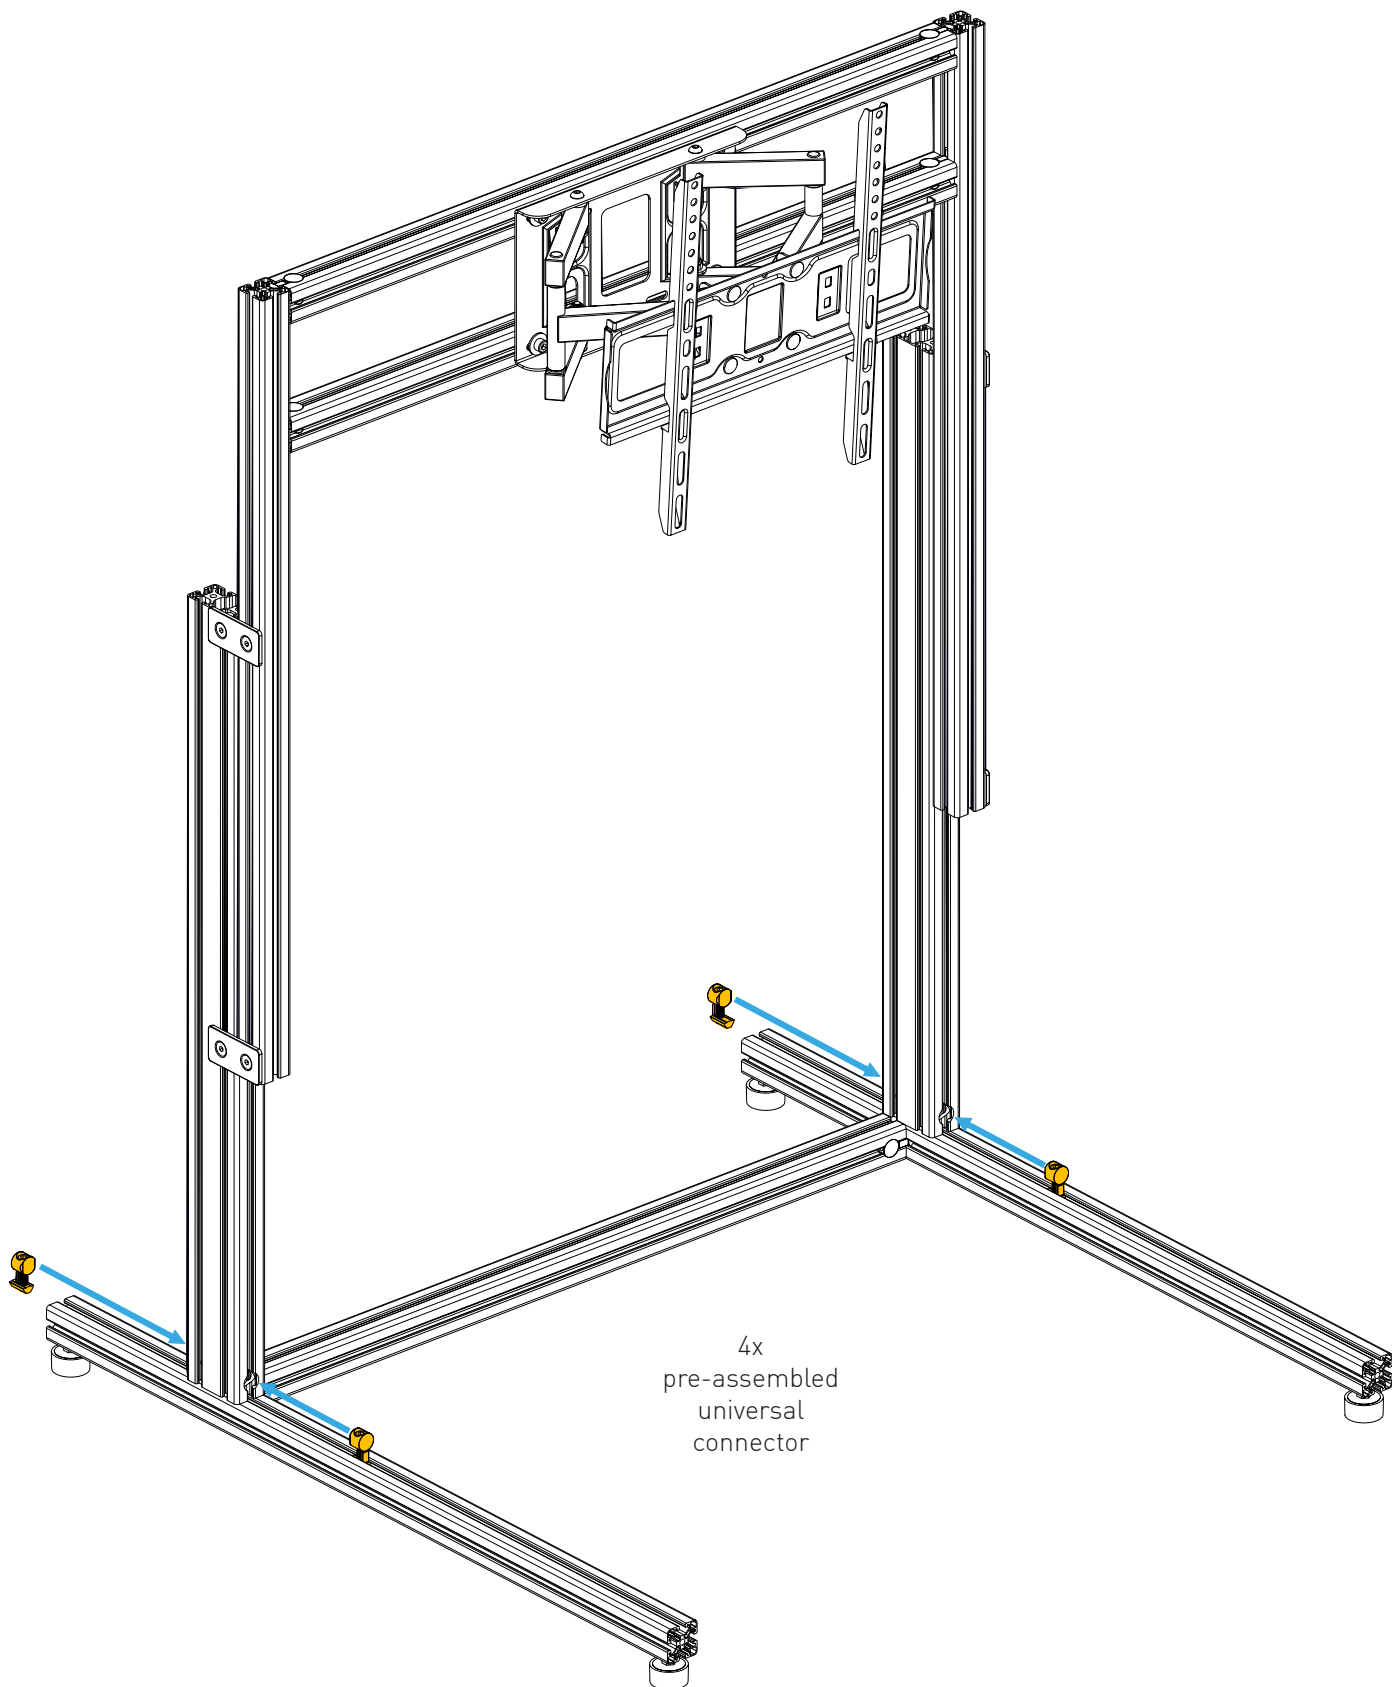 

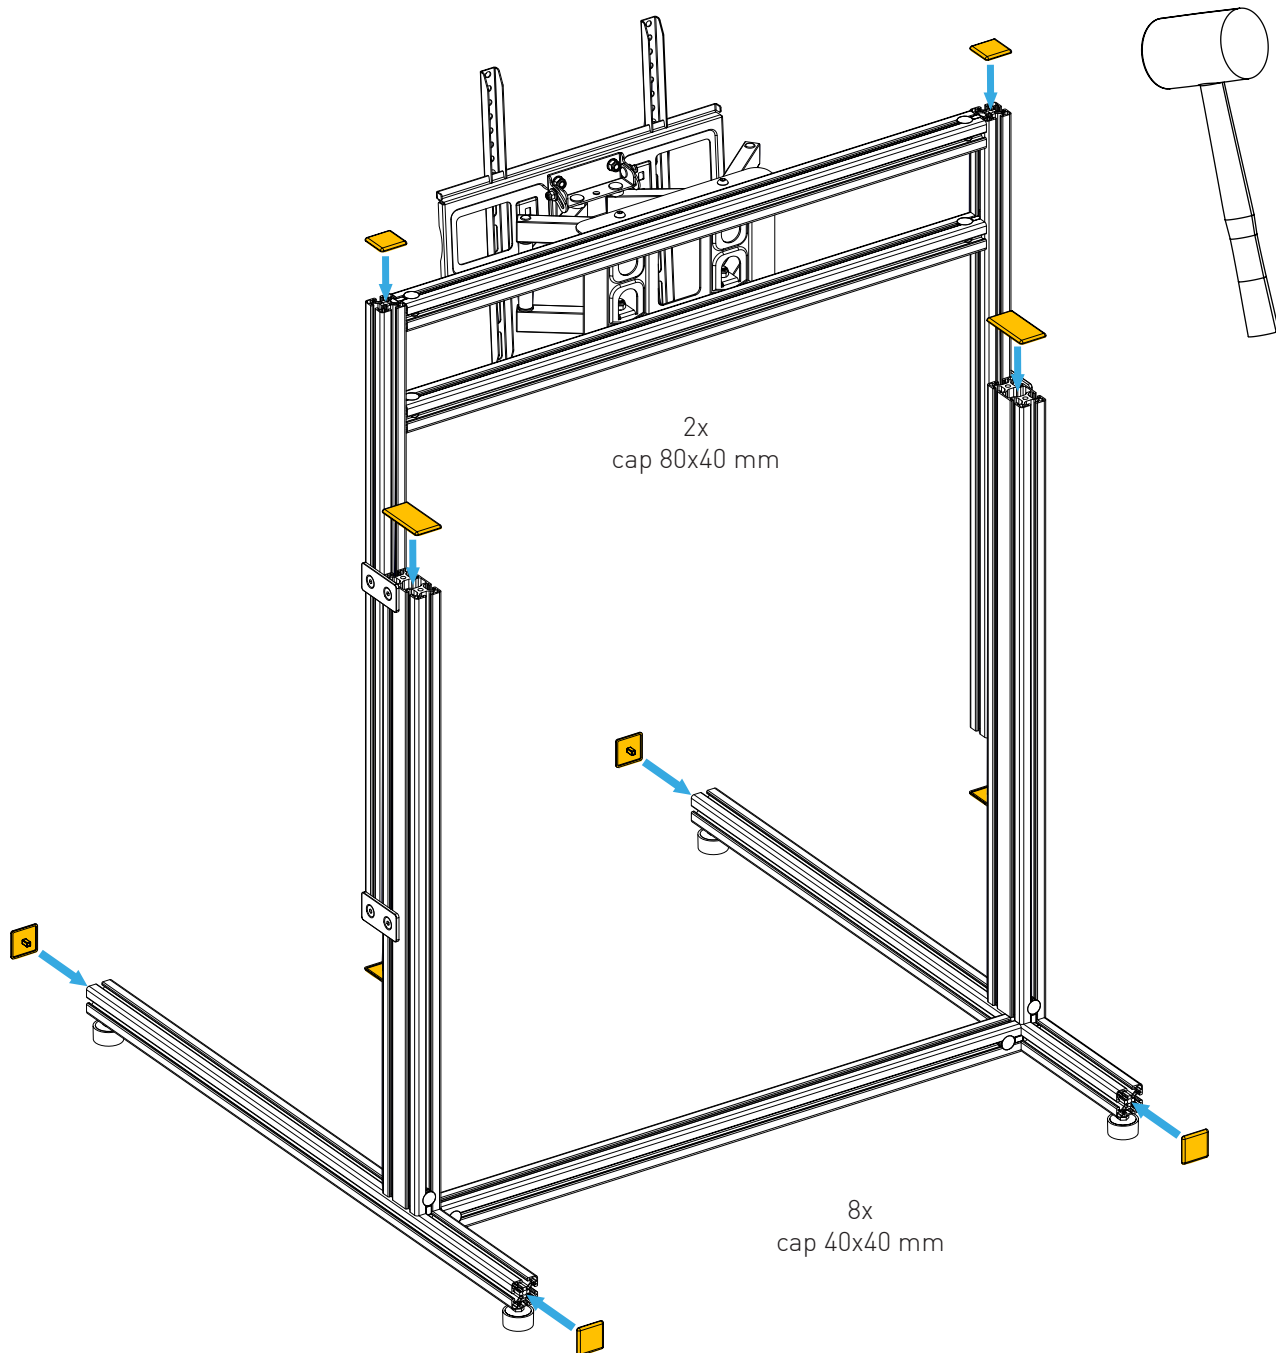 


detail:


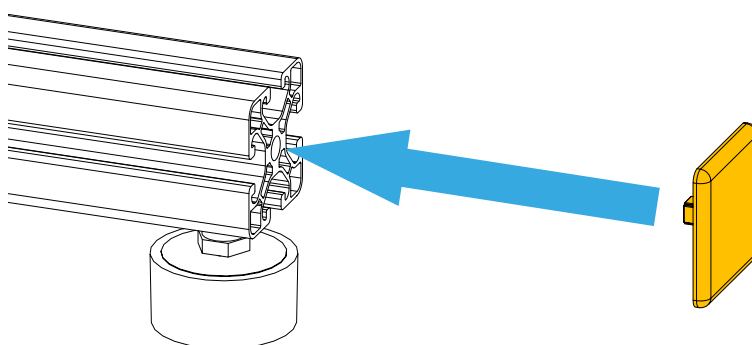 


Height adjustment

 Loosen the red marked screws on both sides to adjust the height of the yellow marked parts.

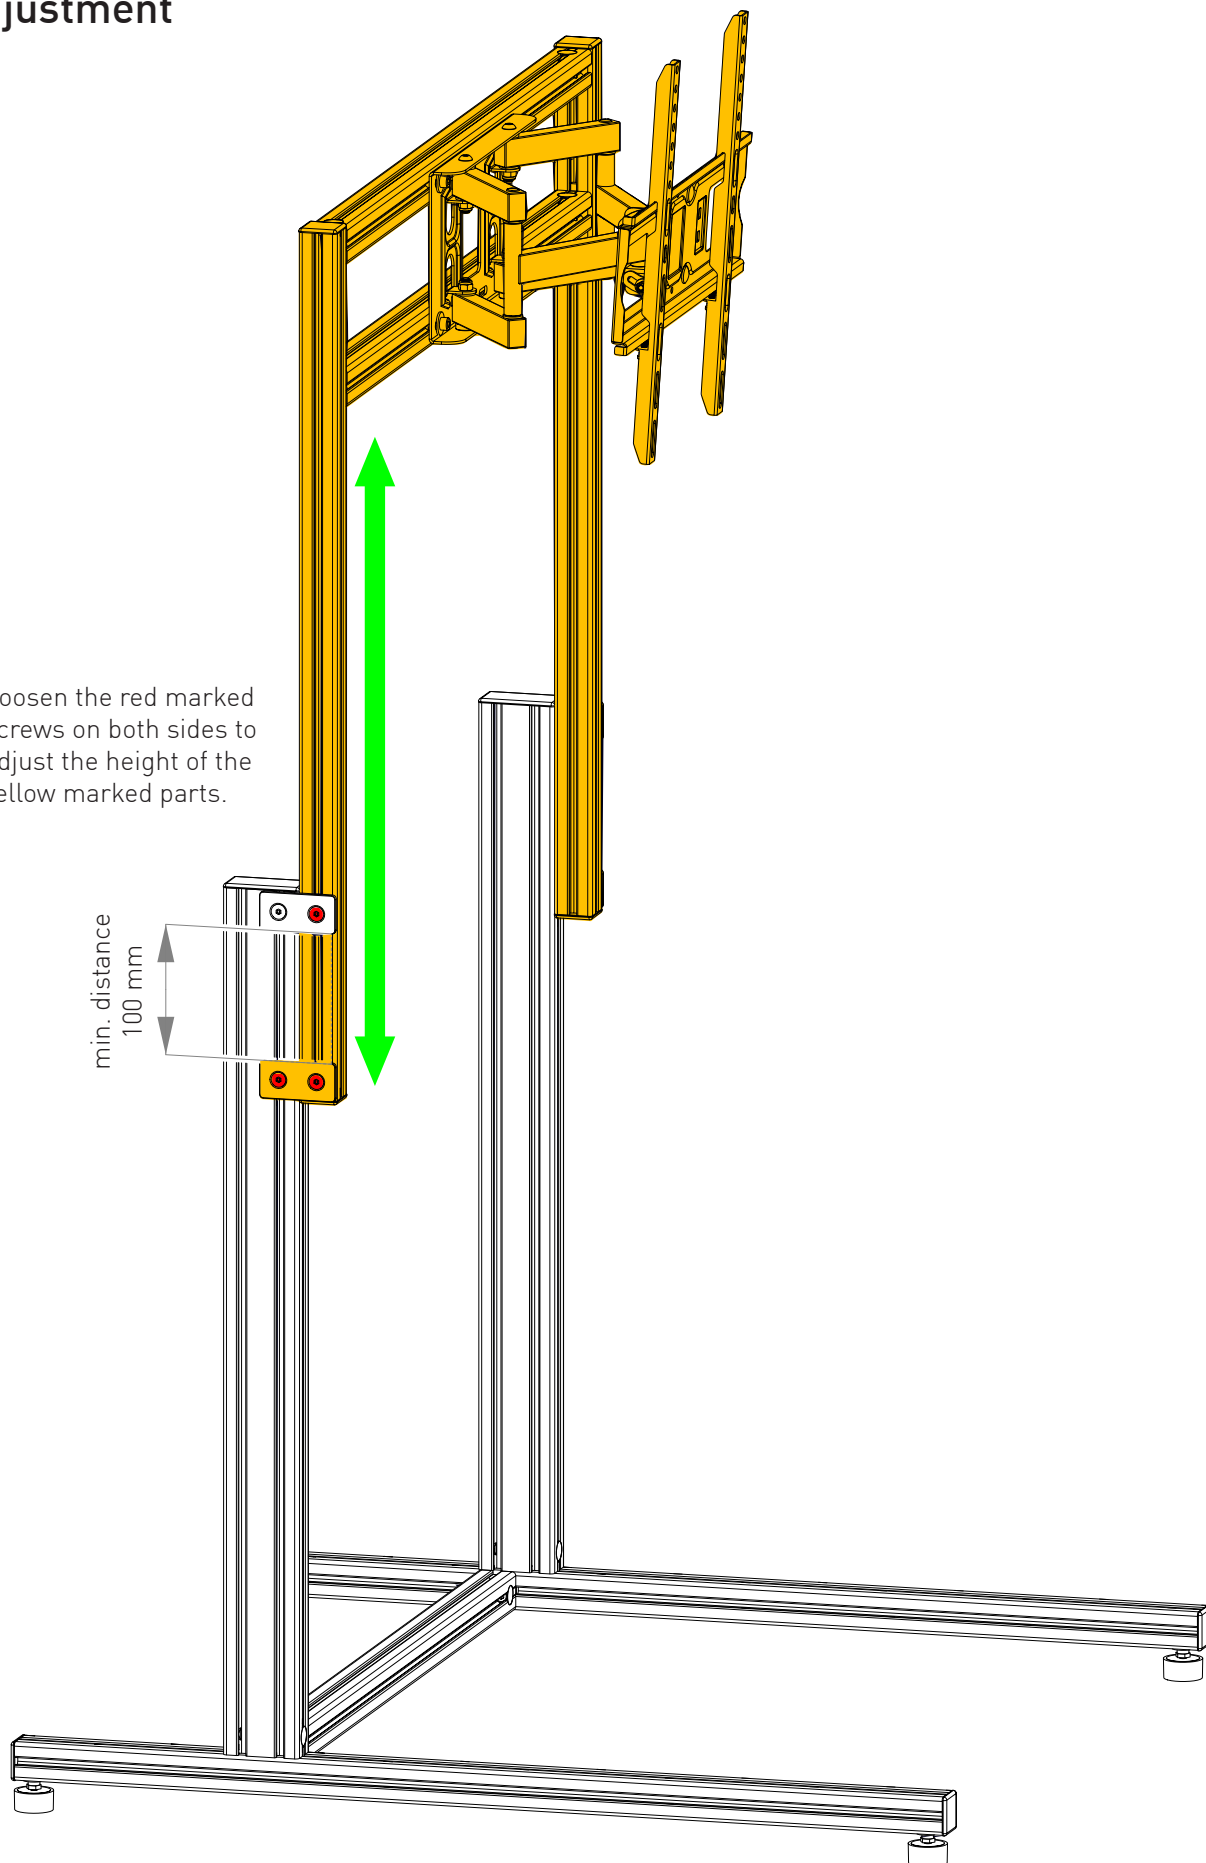

  Optional with TV/Monitor Triple Extension

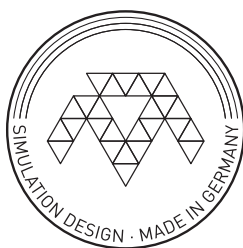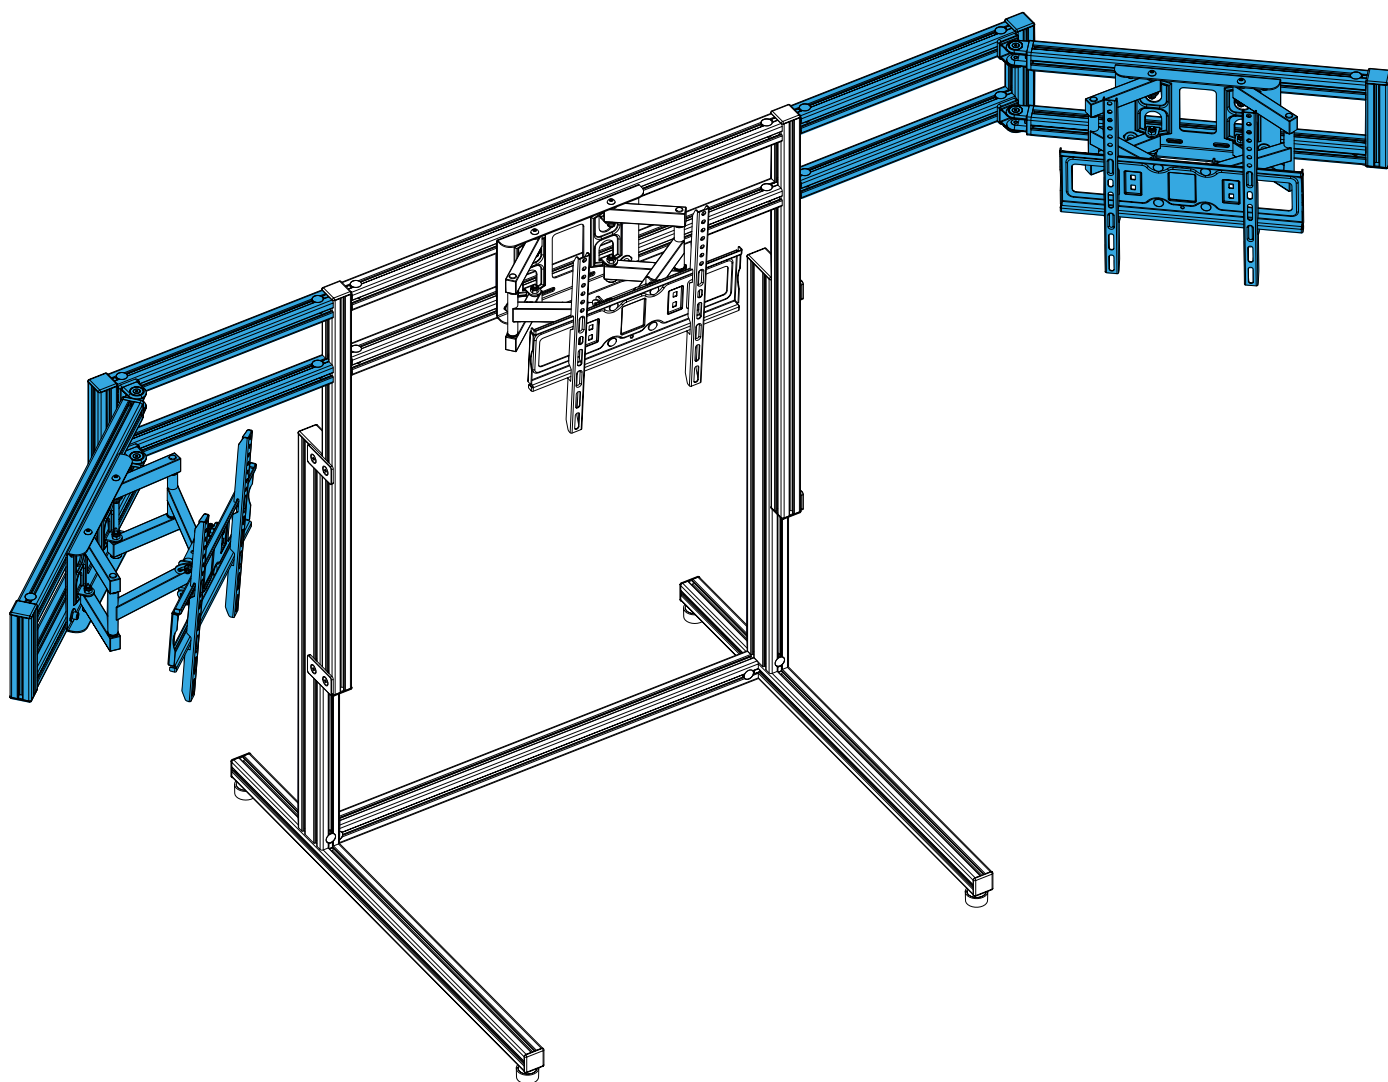

06-08-2023