
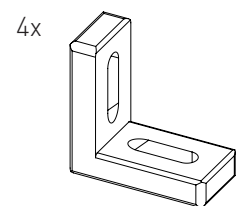
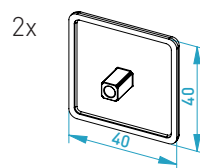
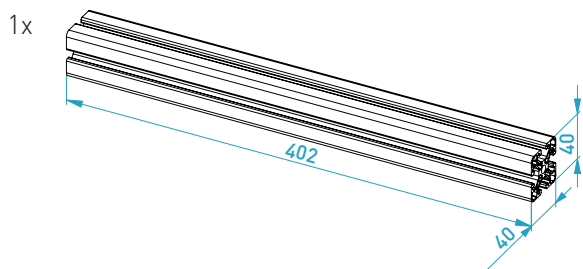
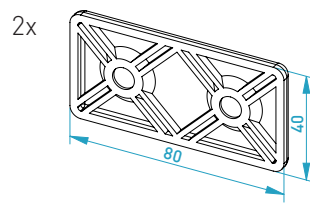
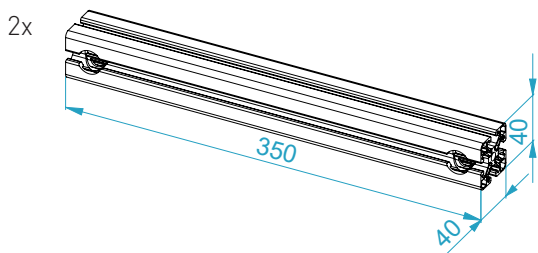
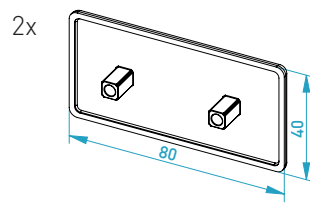
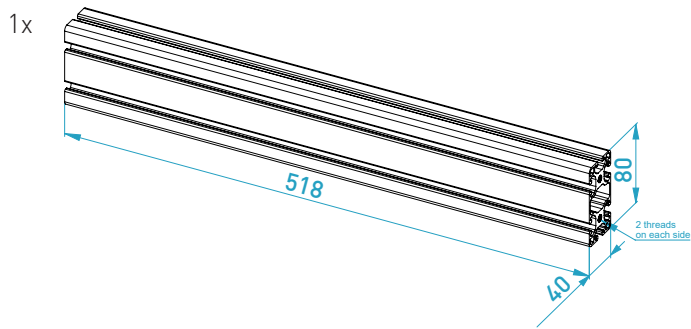
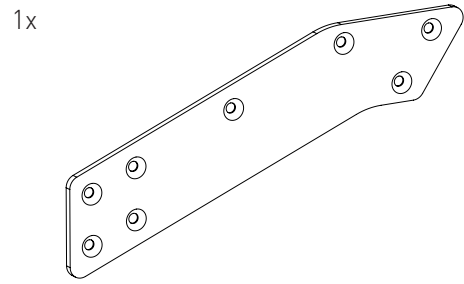
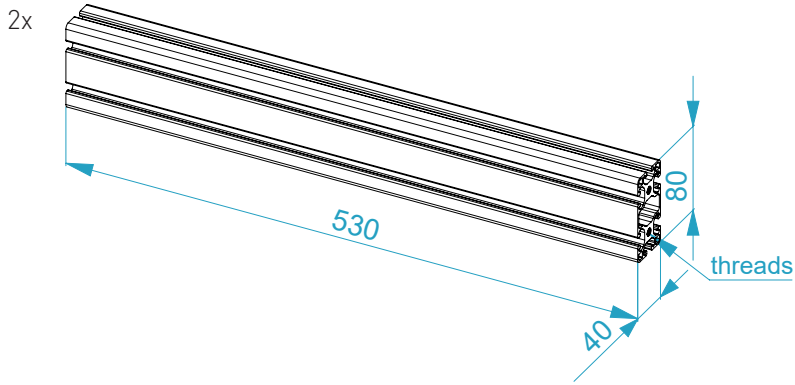
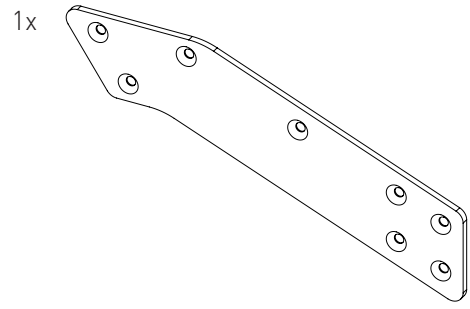


**MTS  
YOKE**



Instruction Manual  
Bedienungsanleitung  
Mode d'emploi

# PARTS



[dimensions in mm / different scales]  
No extra or spare parts listed!

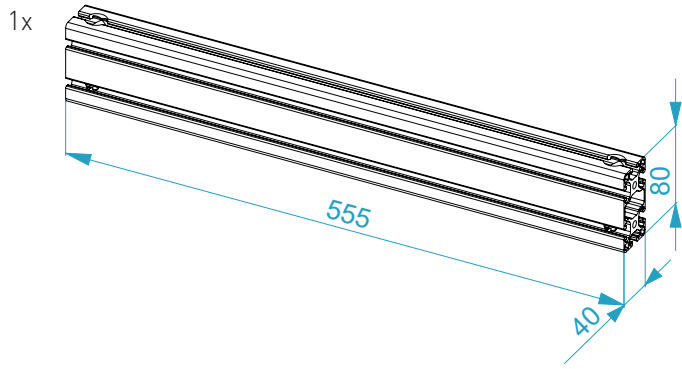



## BAG 1

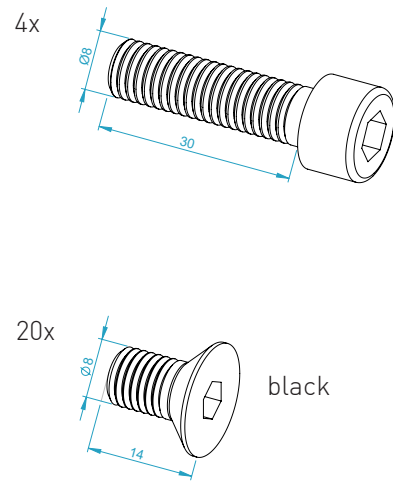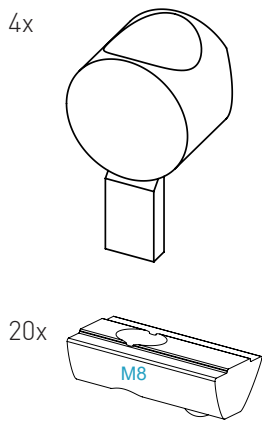


## BAG 2

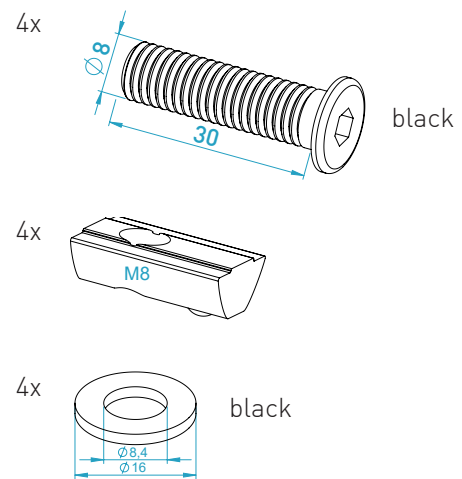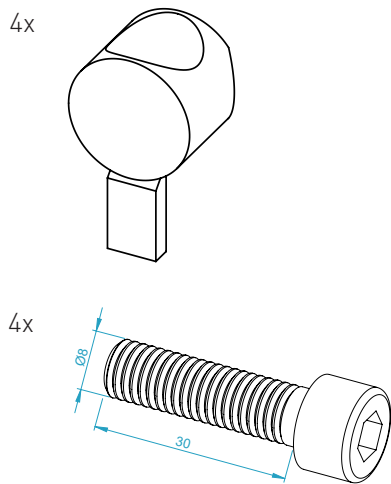

## BAG 3 with parts for yoke assembly

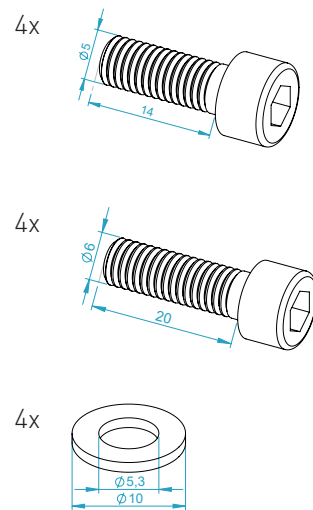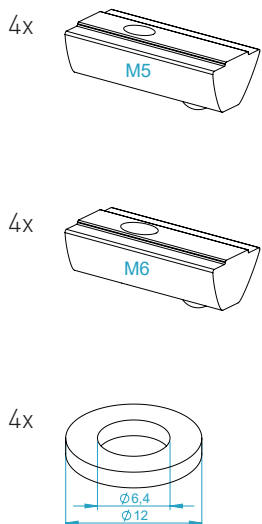


# PRE-ASSEMBLED

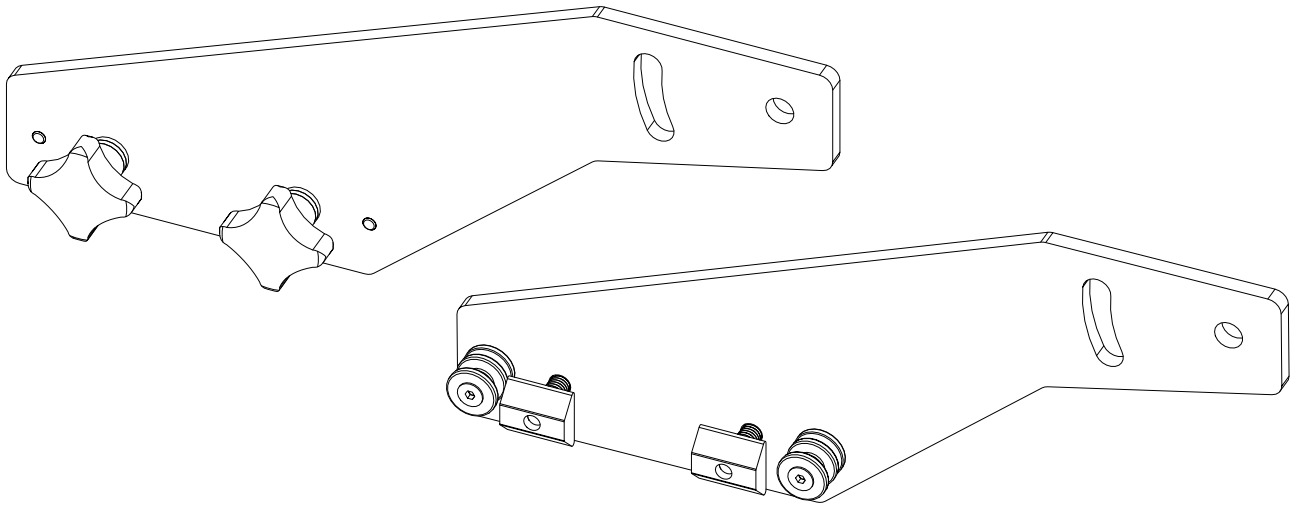


with this parts:


2x

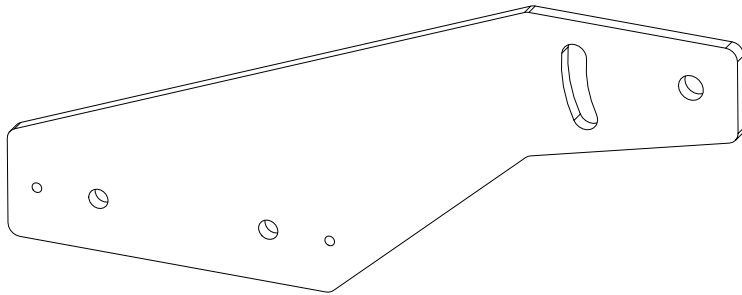


4x

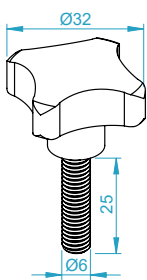


8x

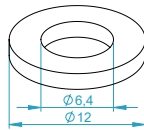


4x




4x

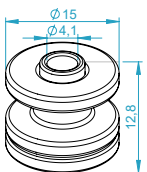



4x





4x

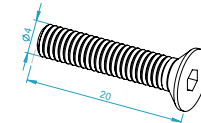


# ASSEMBLY

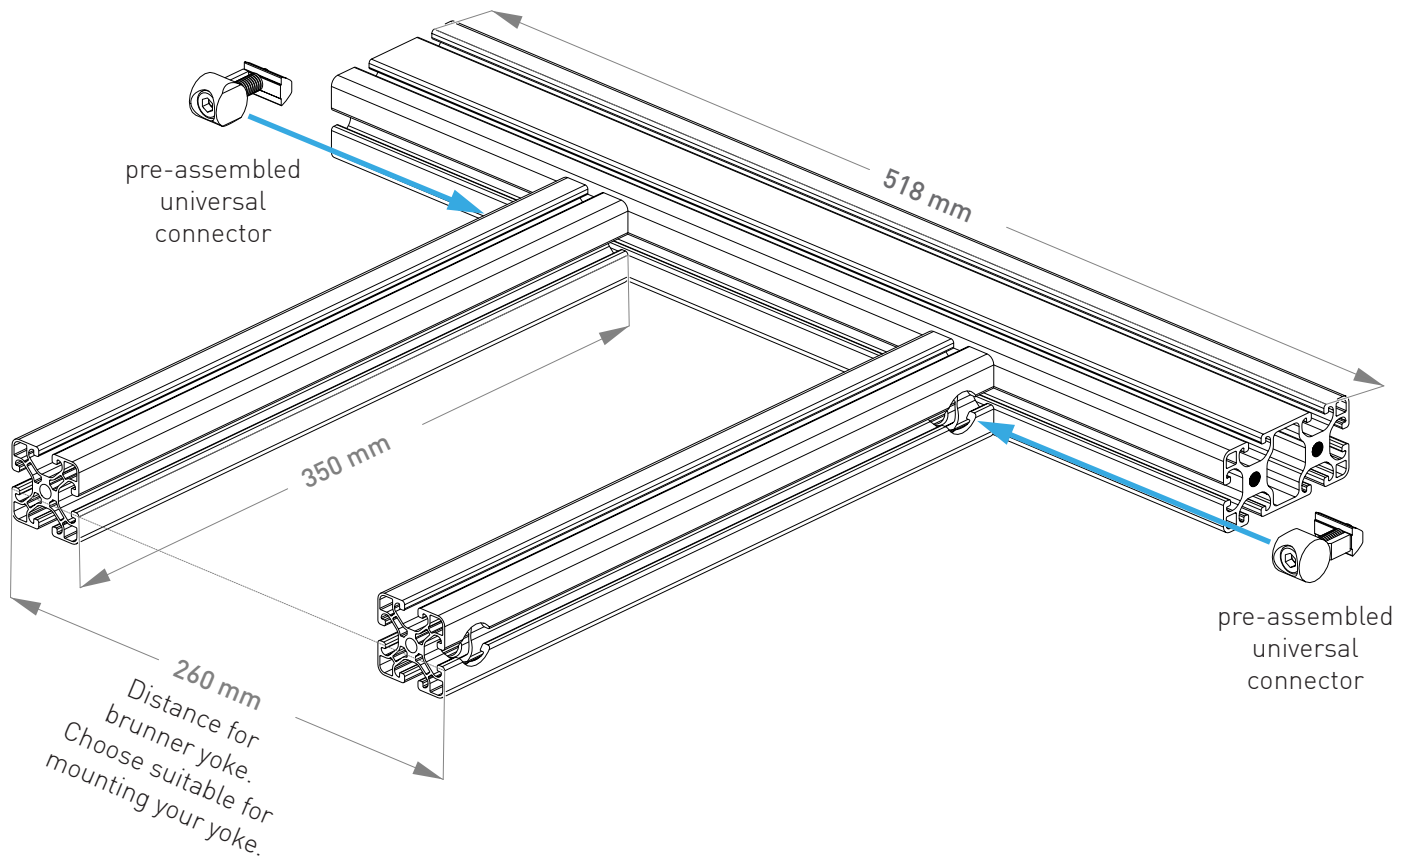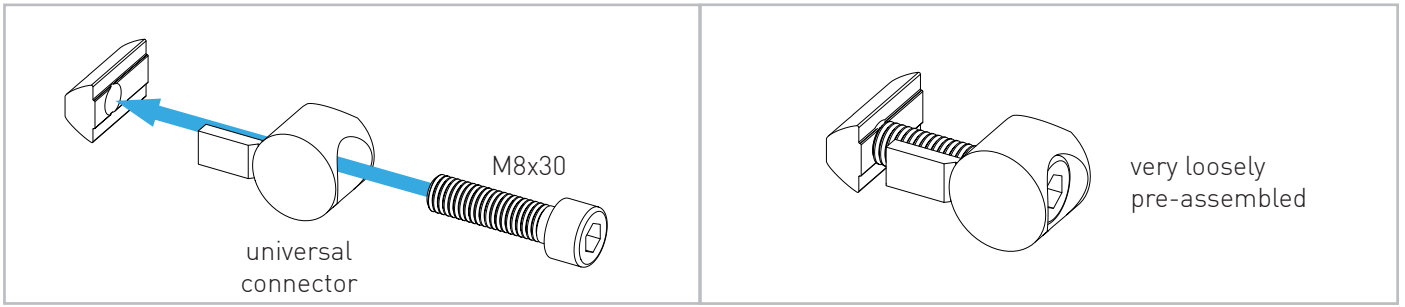


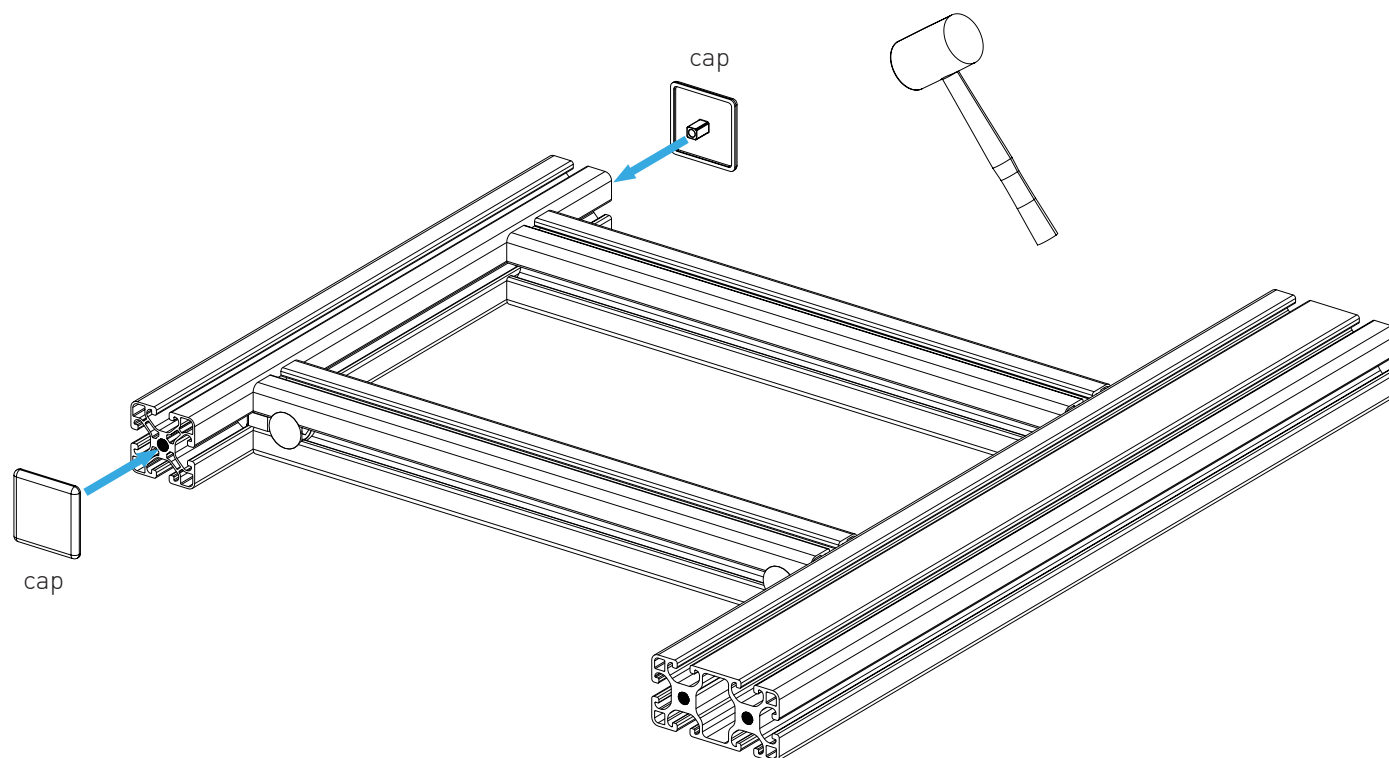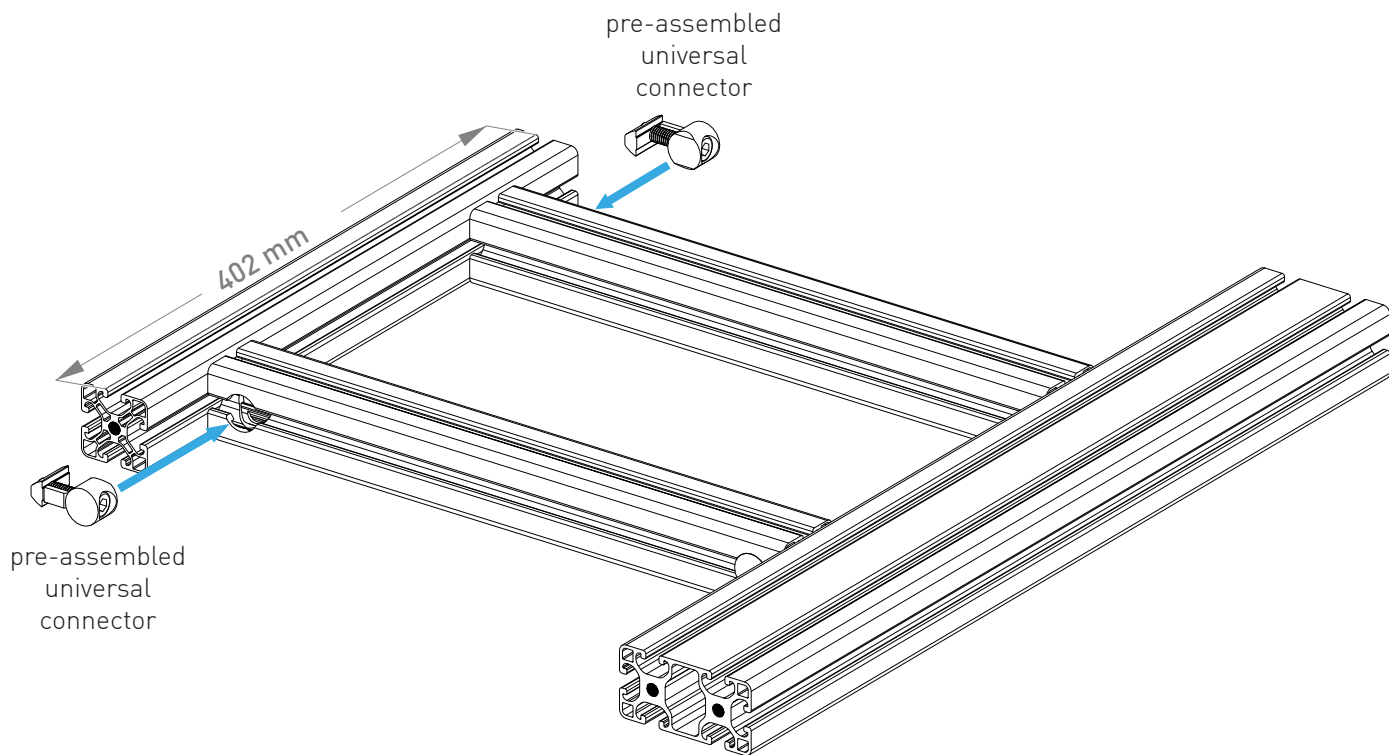

# USUALLY PRE-ASSEMBLED



2x

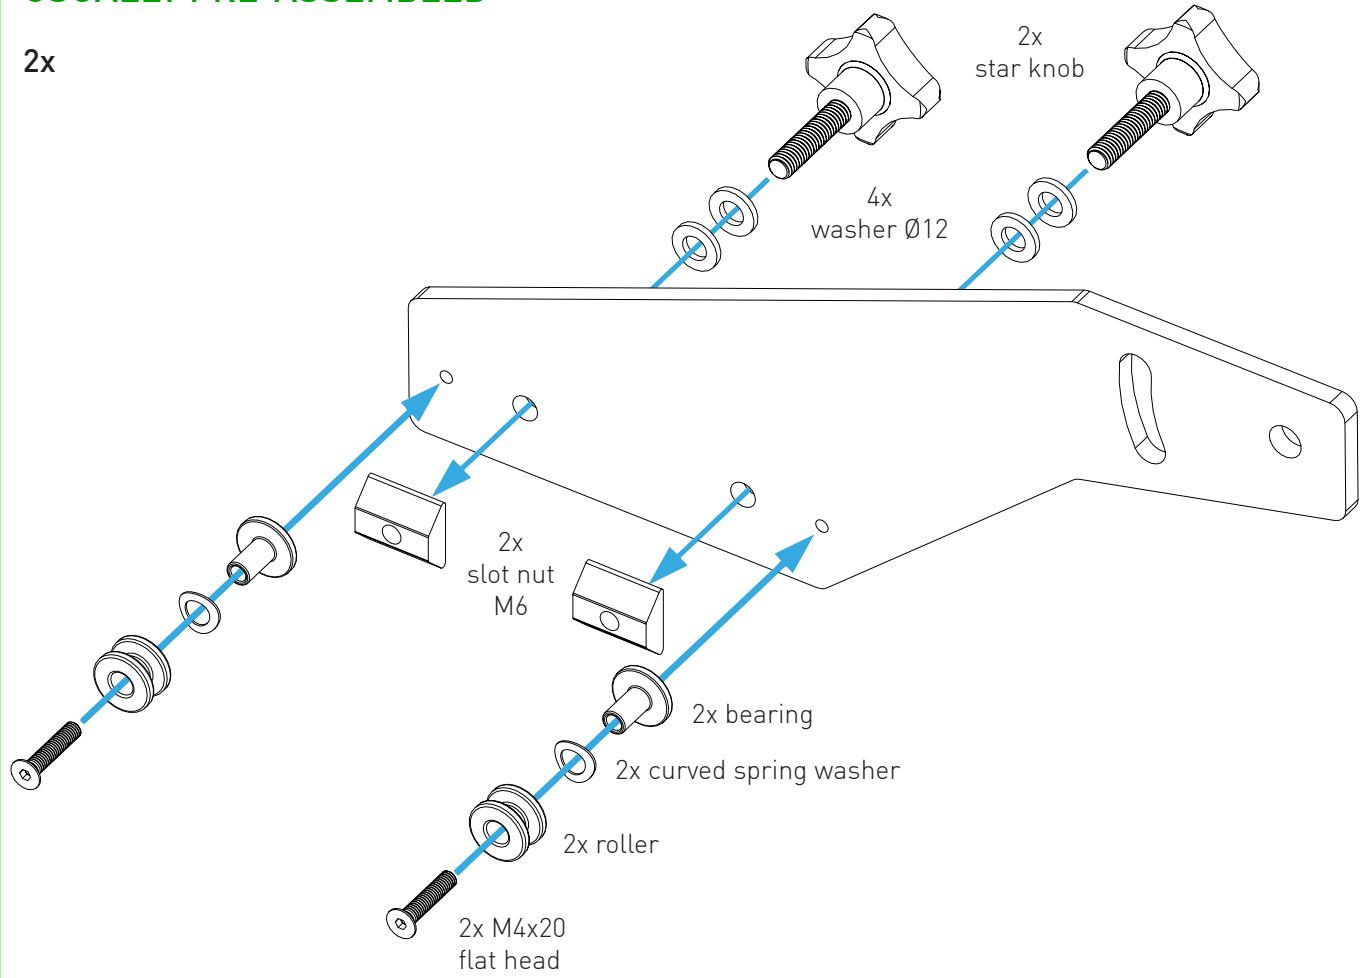


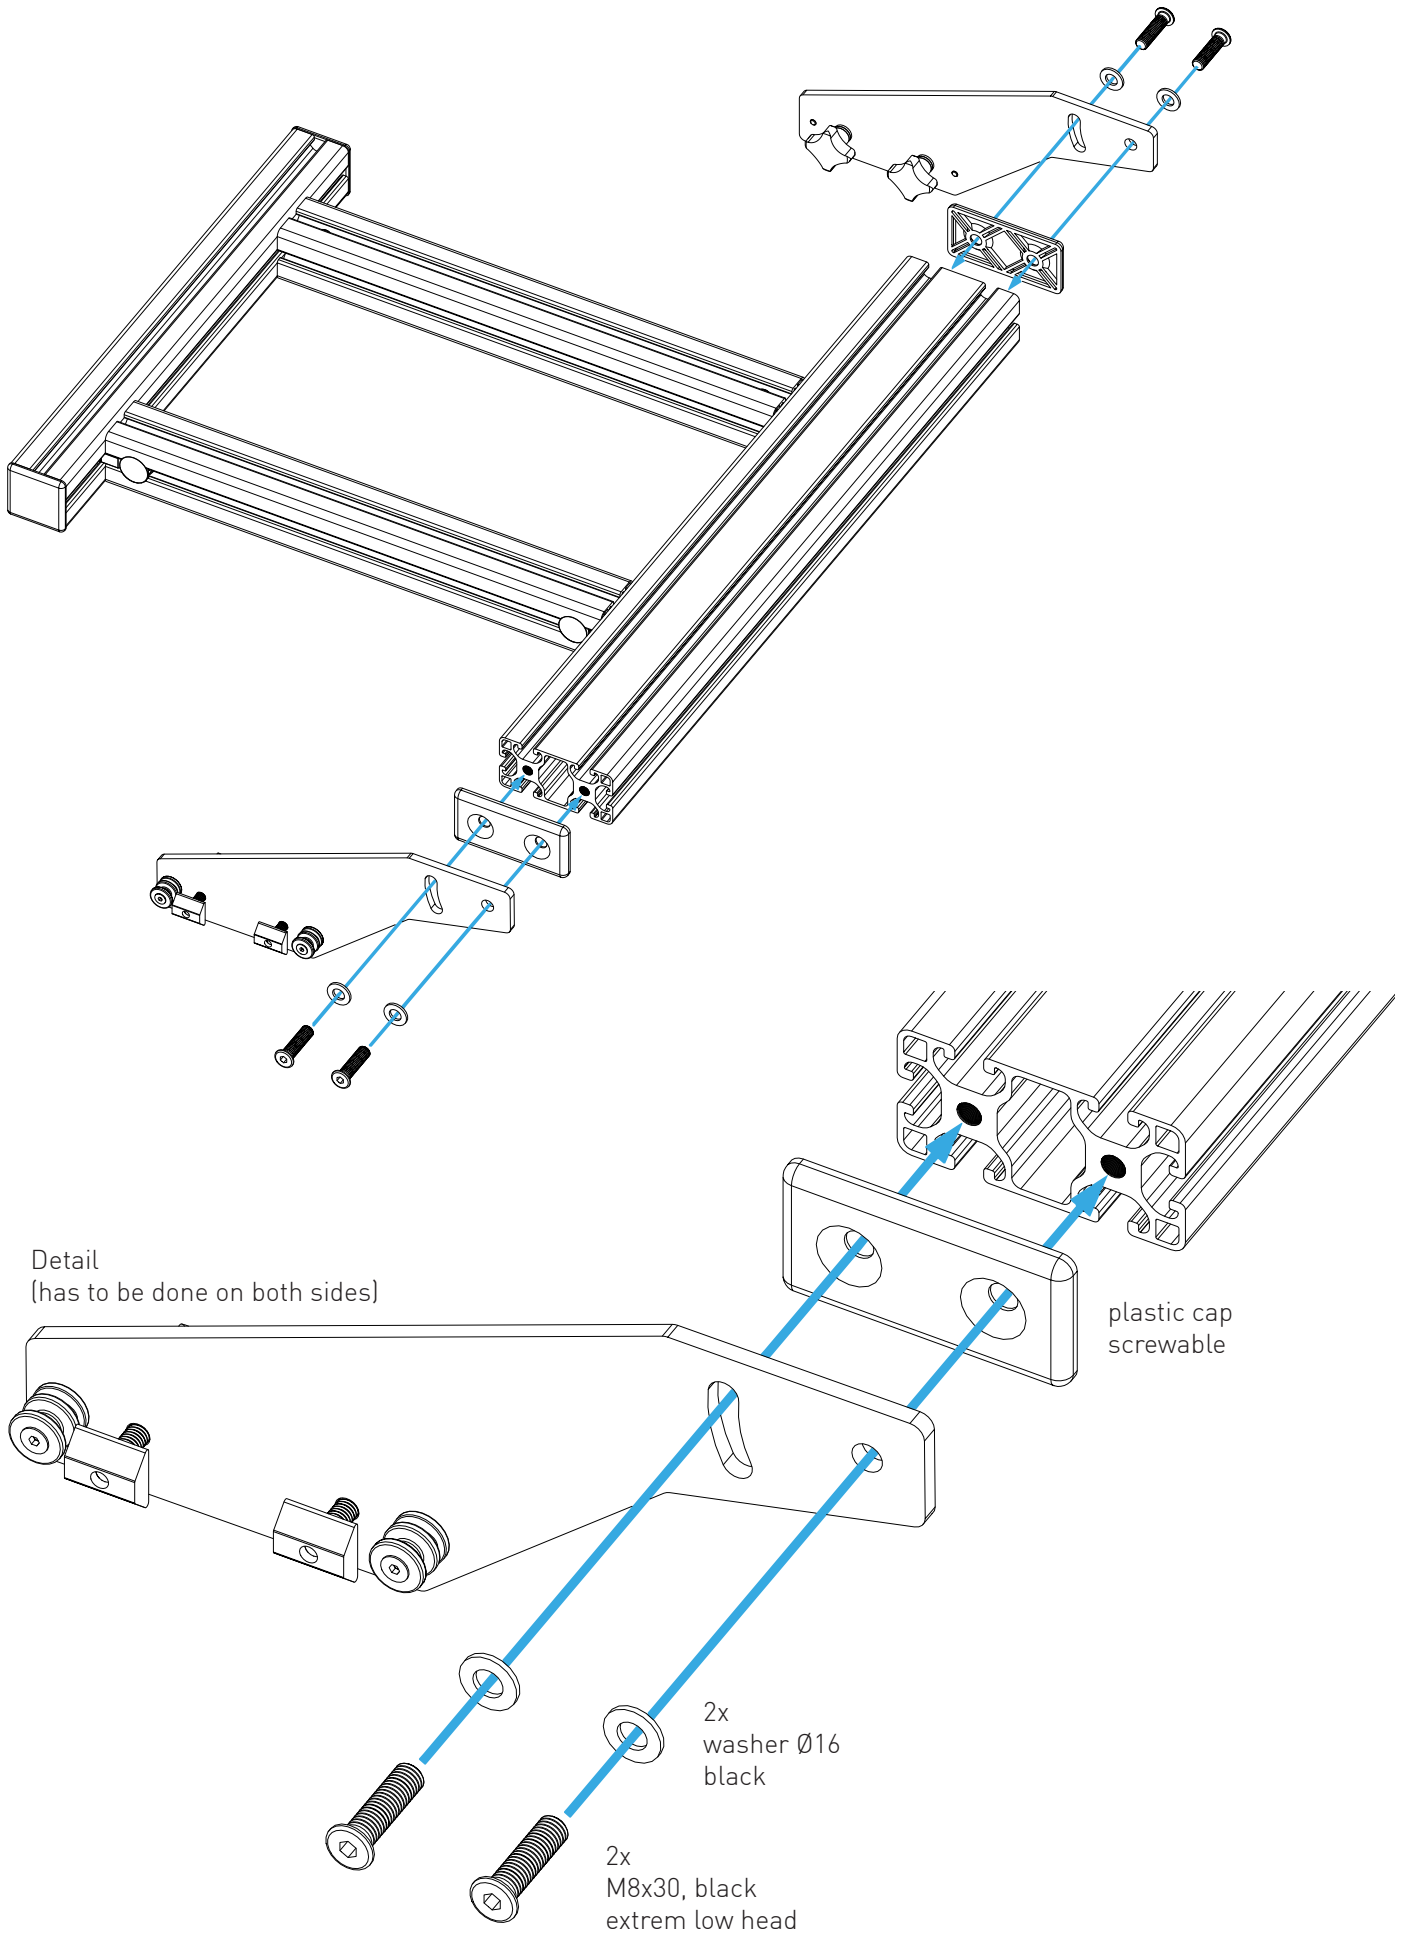





Use a plan surface  
for assembly.

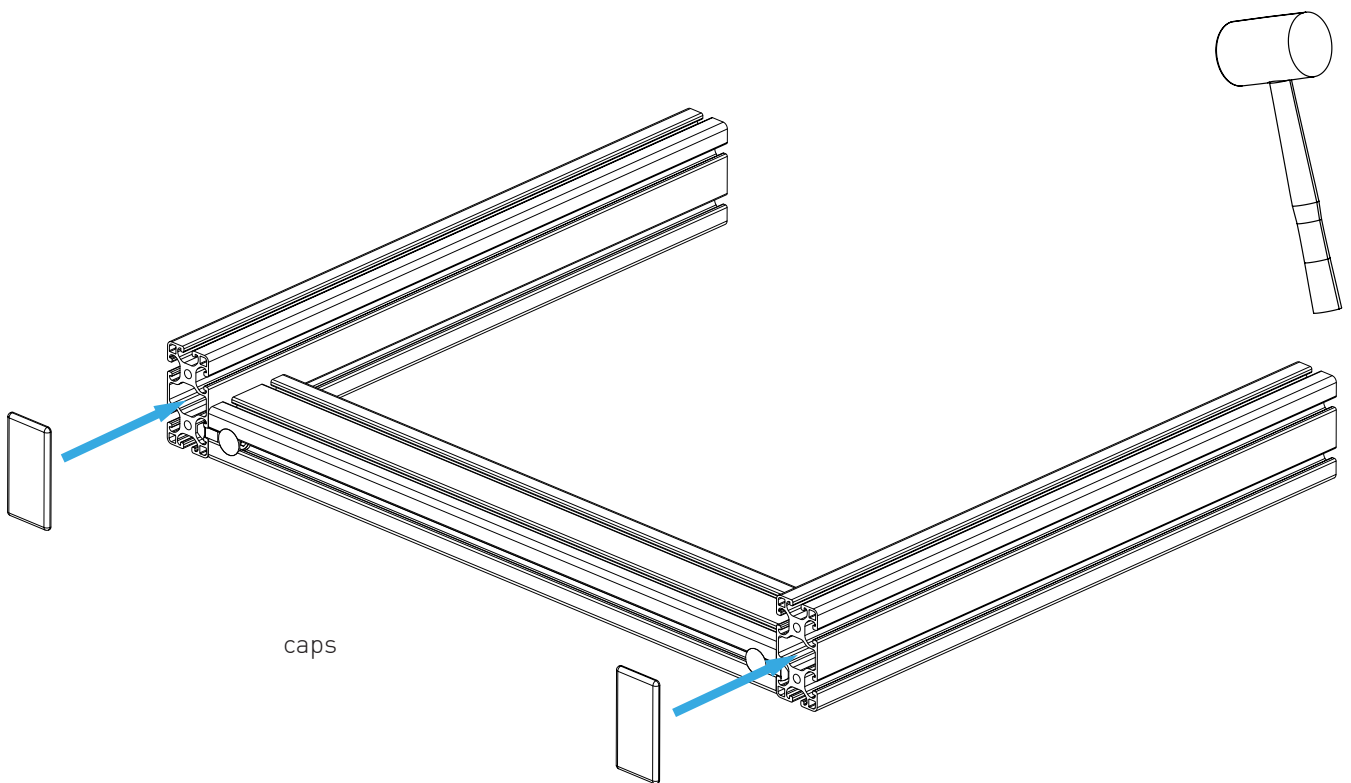
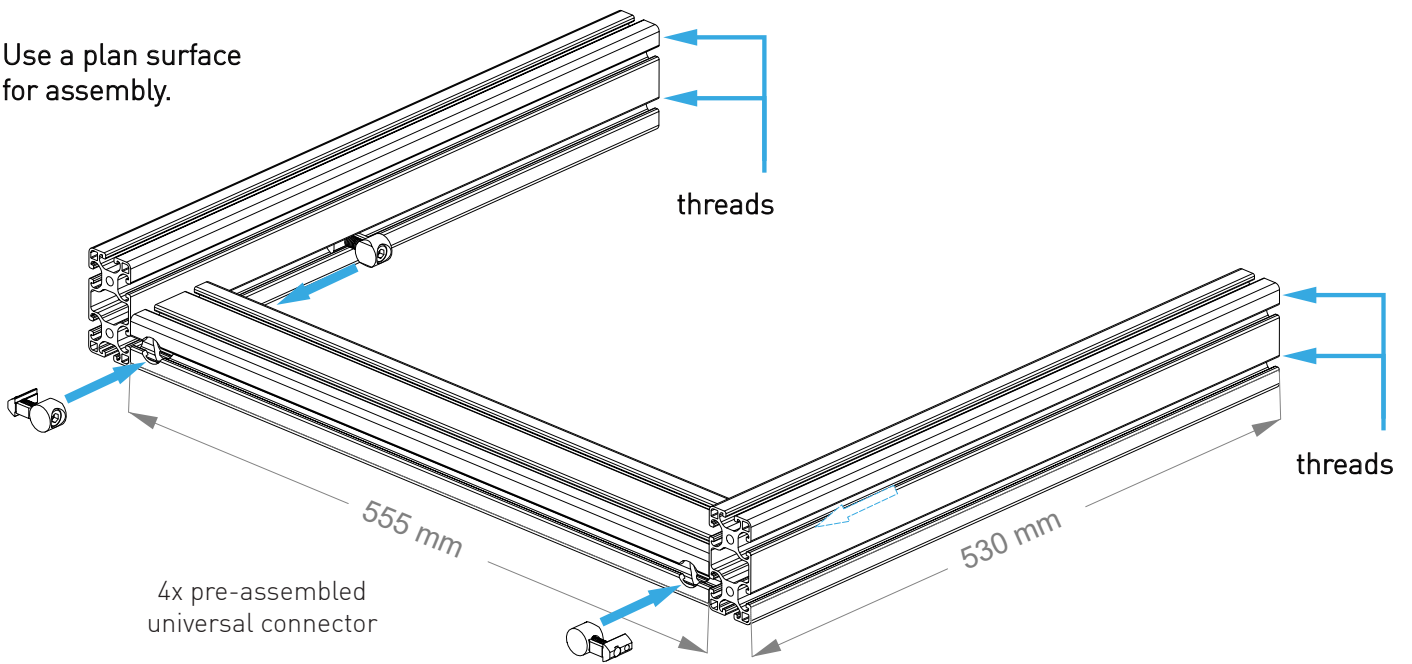


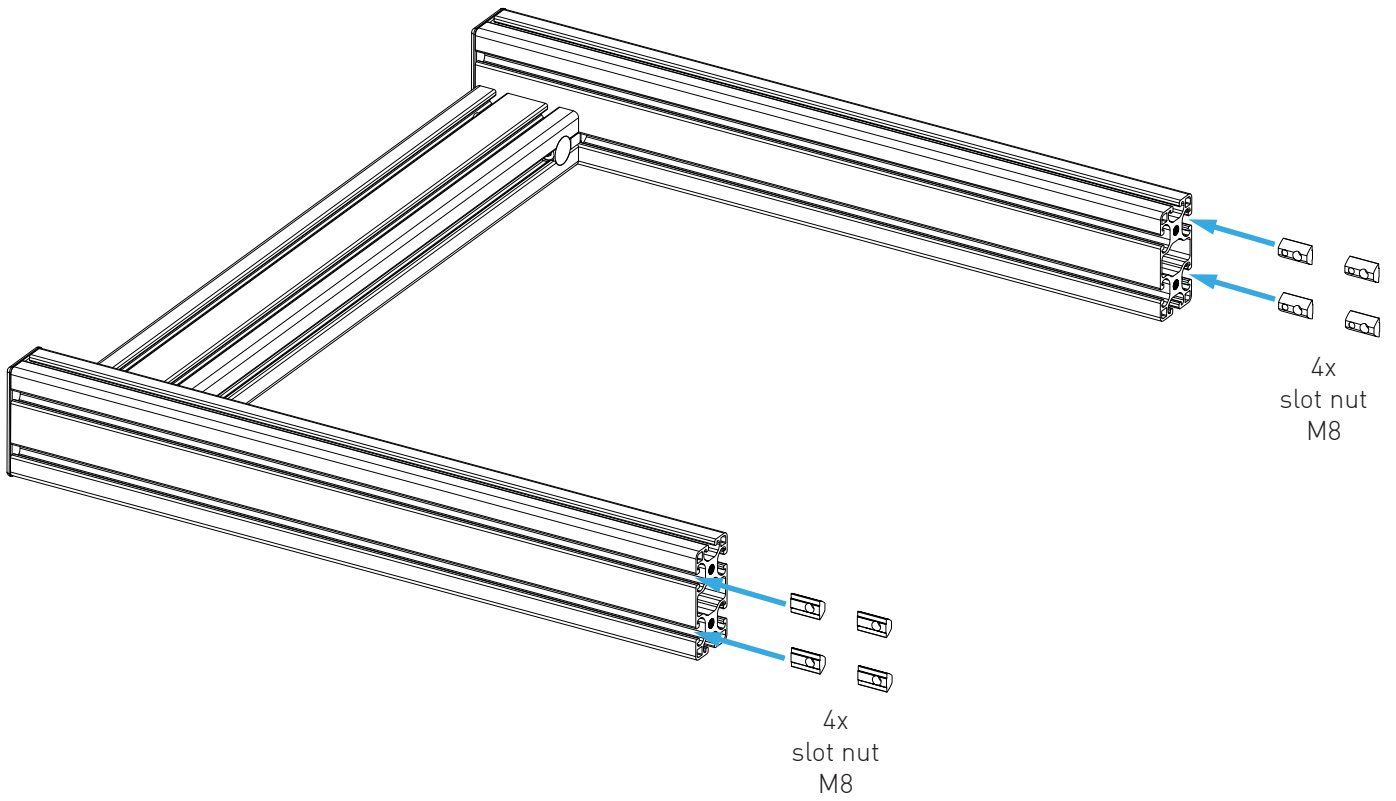


on both sides

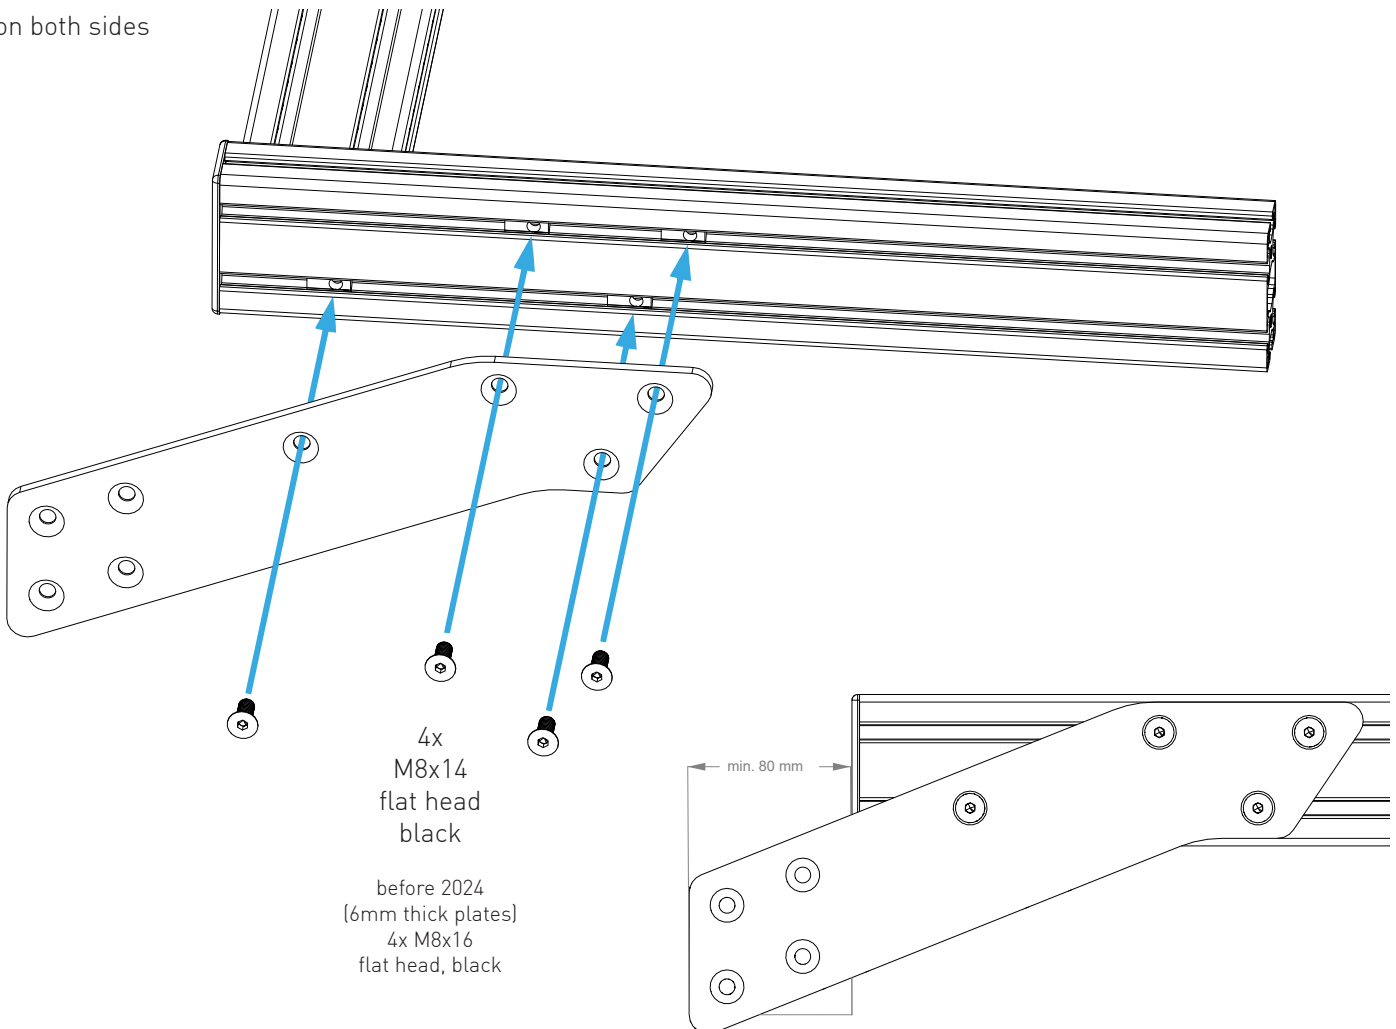

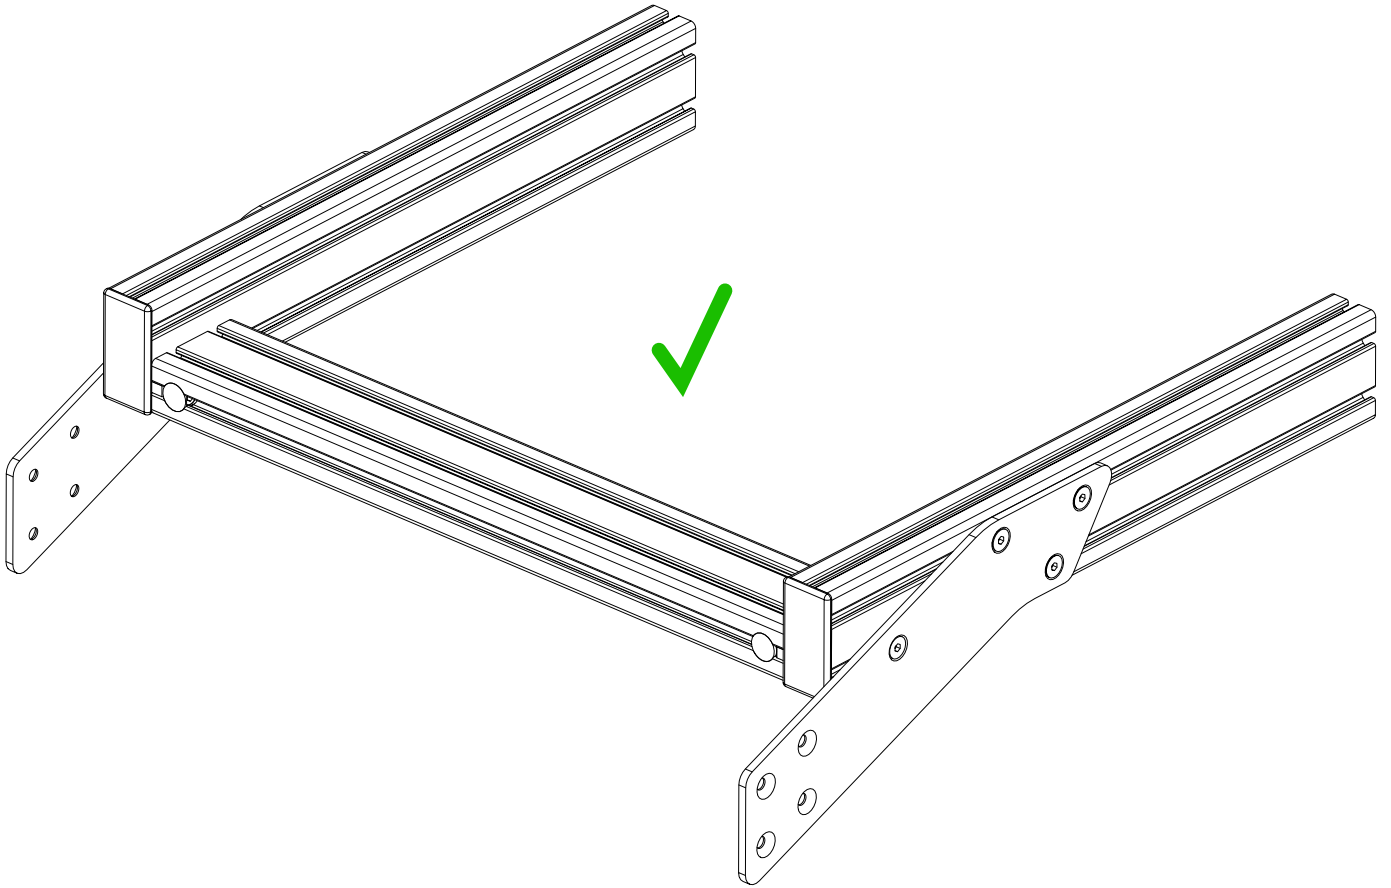


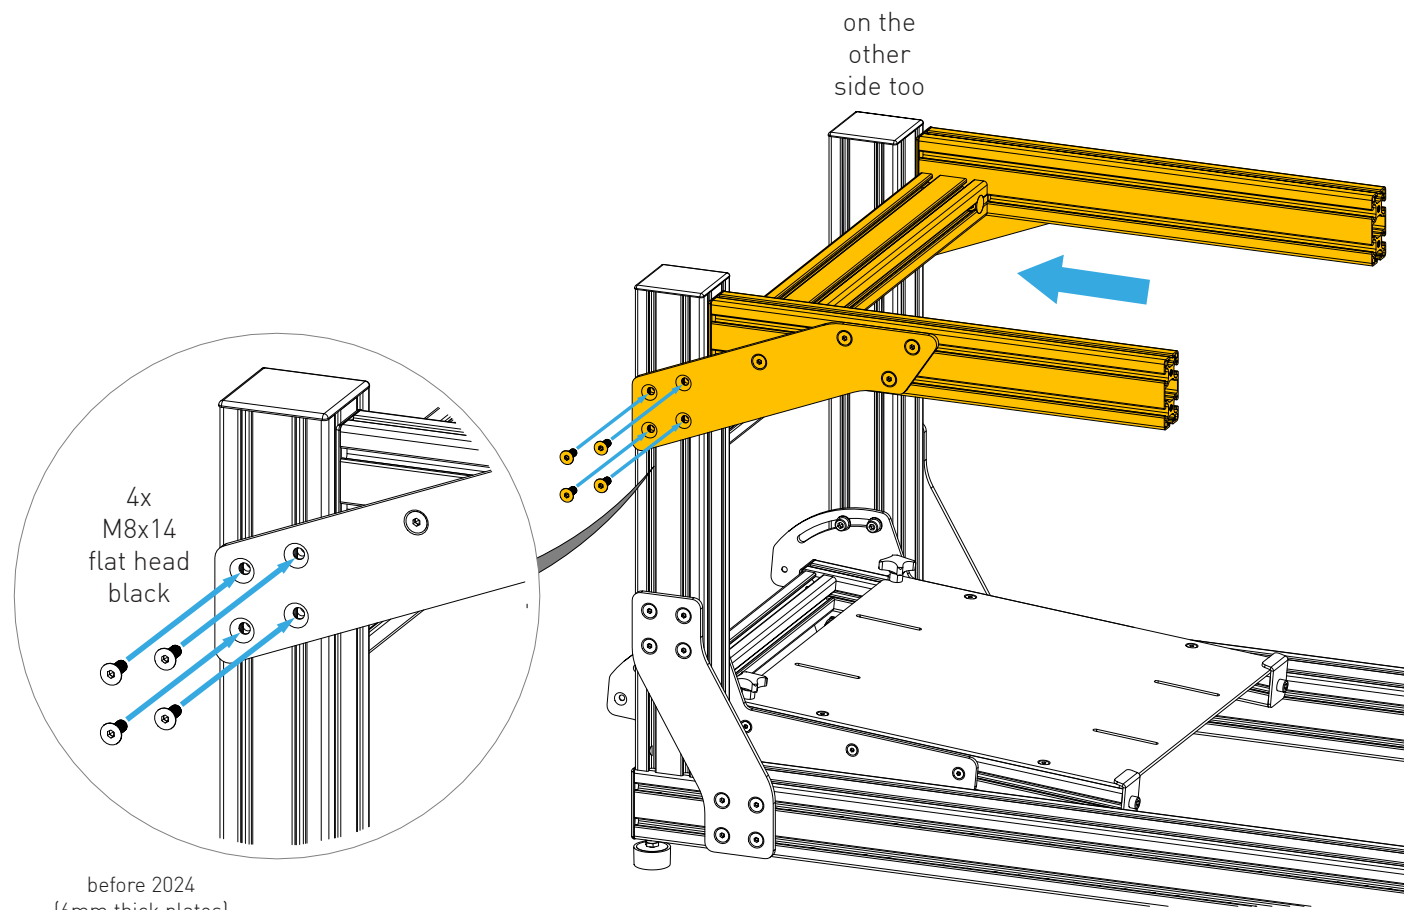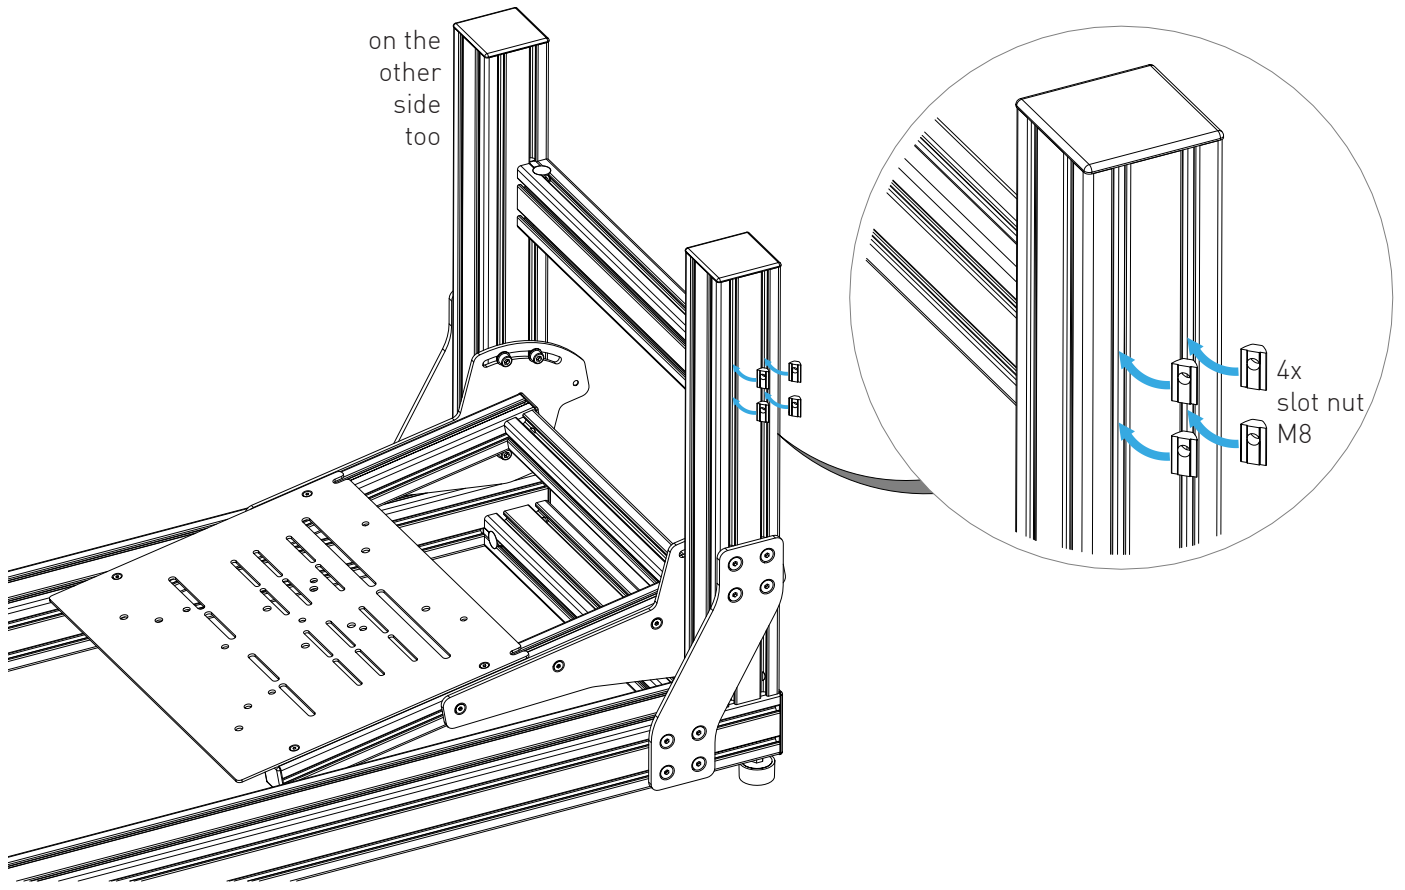


before 2024  
 (6mm thick plates)  
 4x M8x16  
 flat head, black

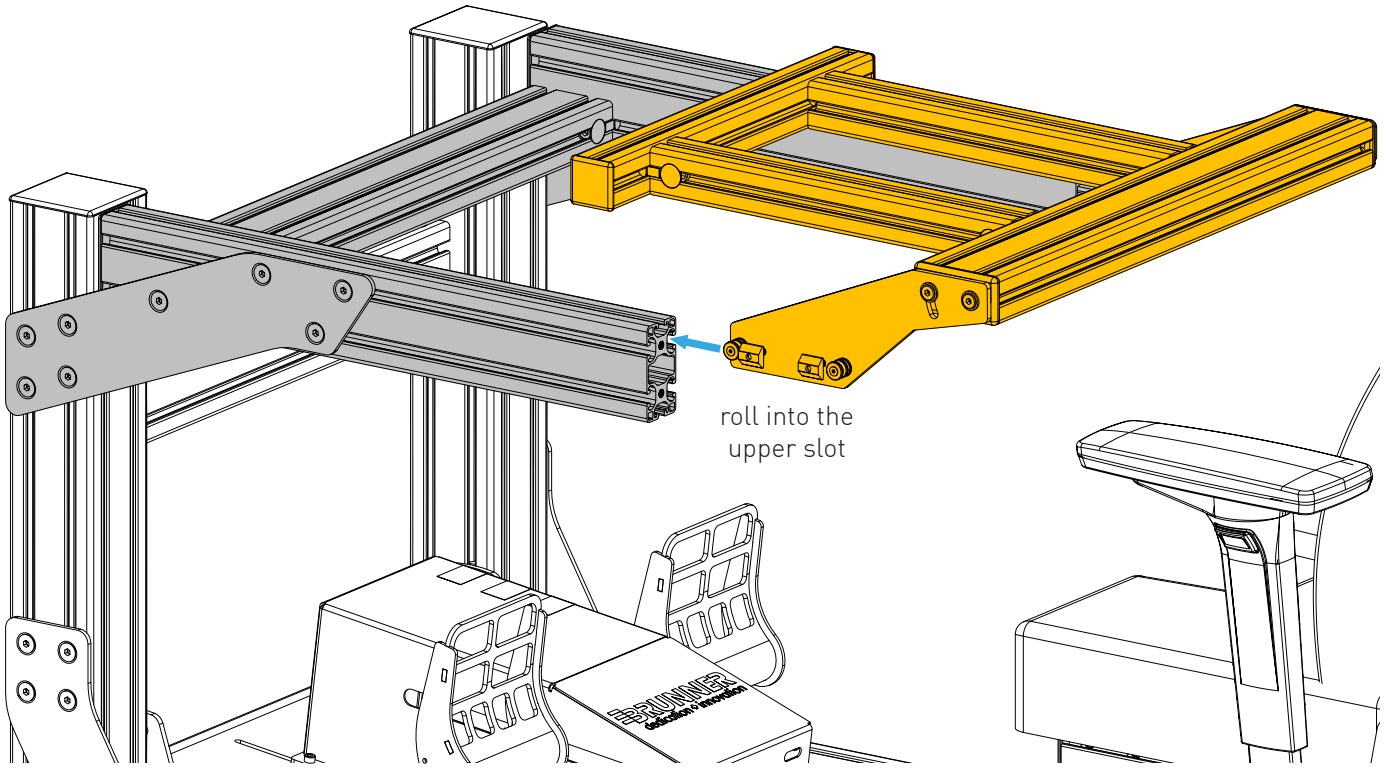


detail views

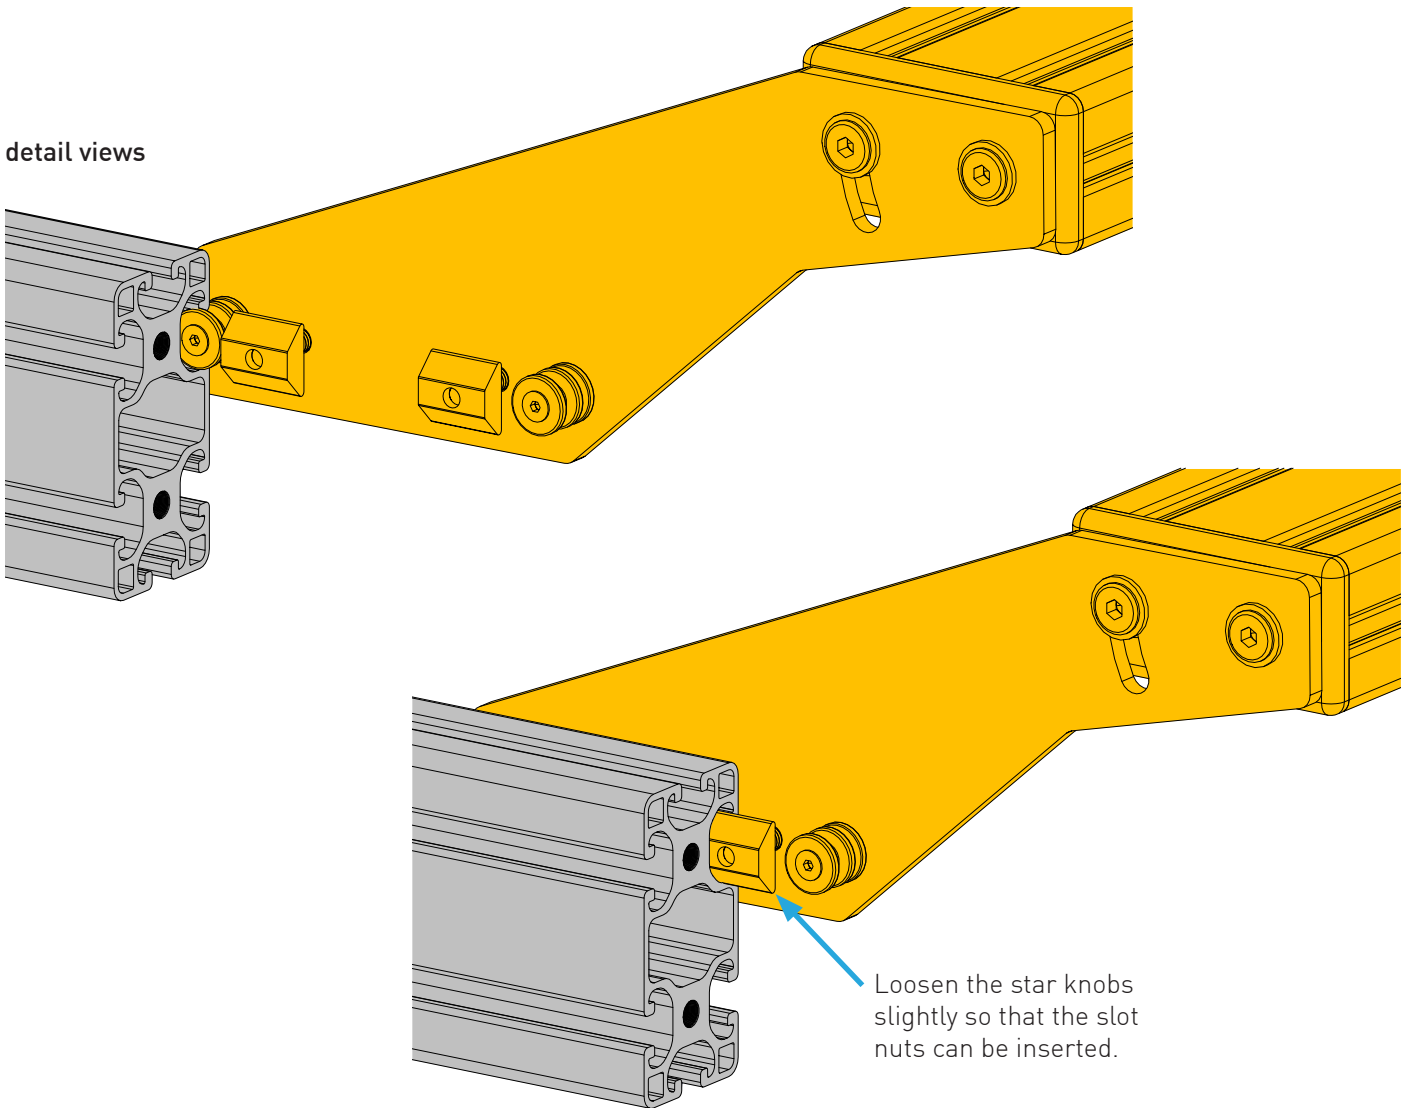


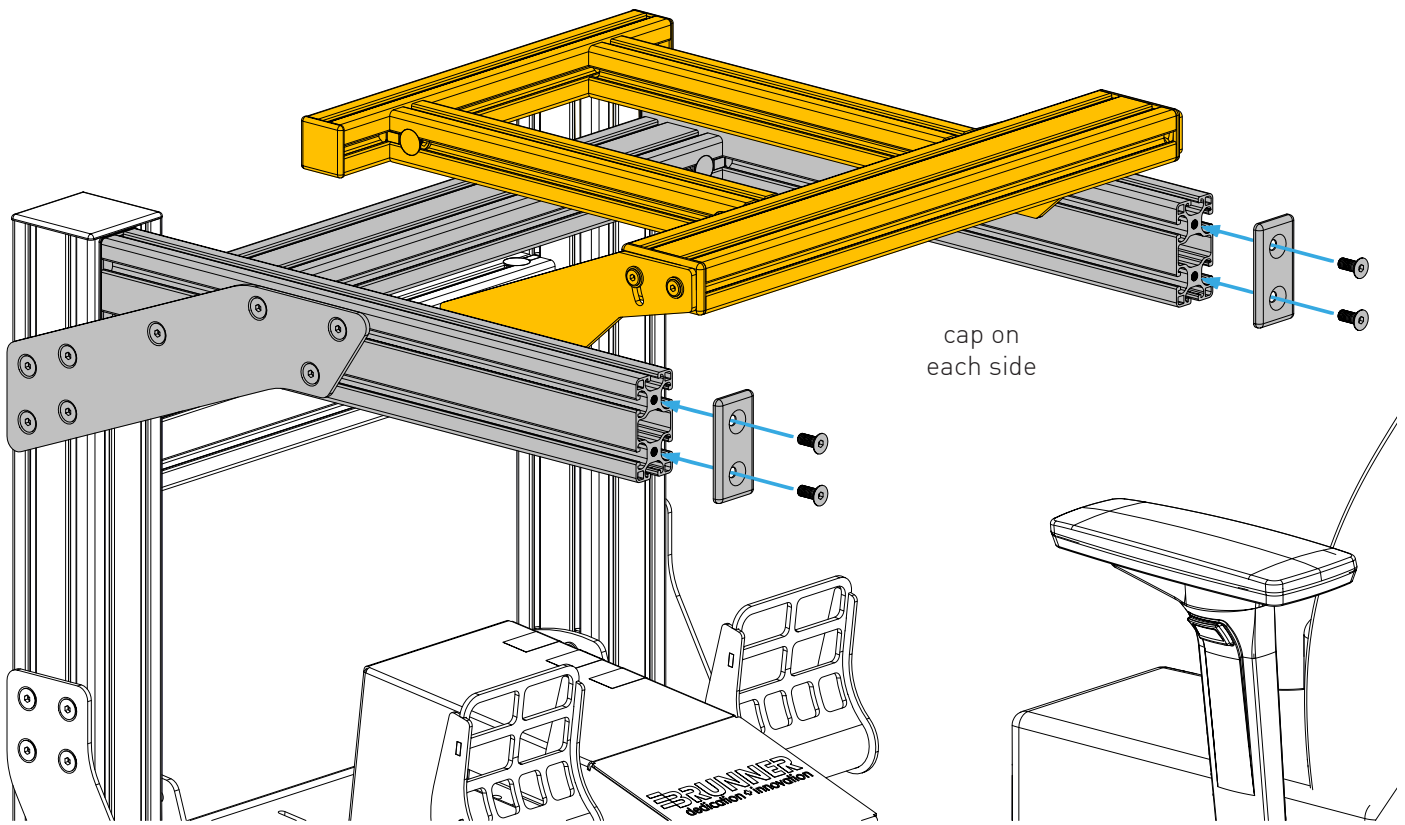


detail

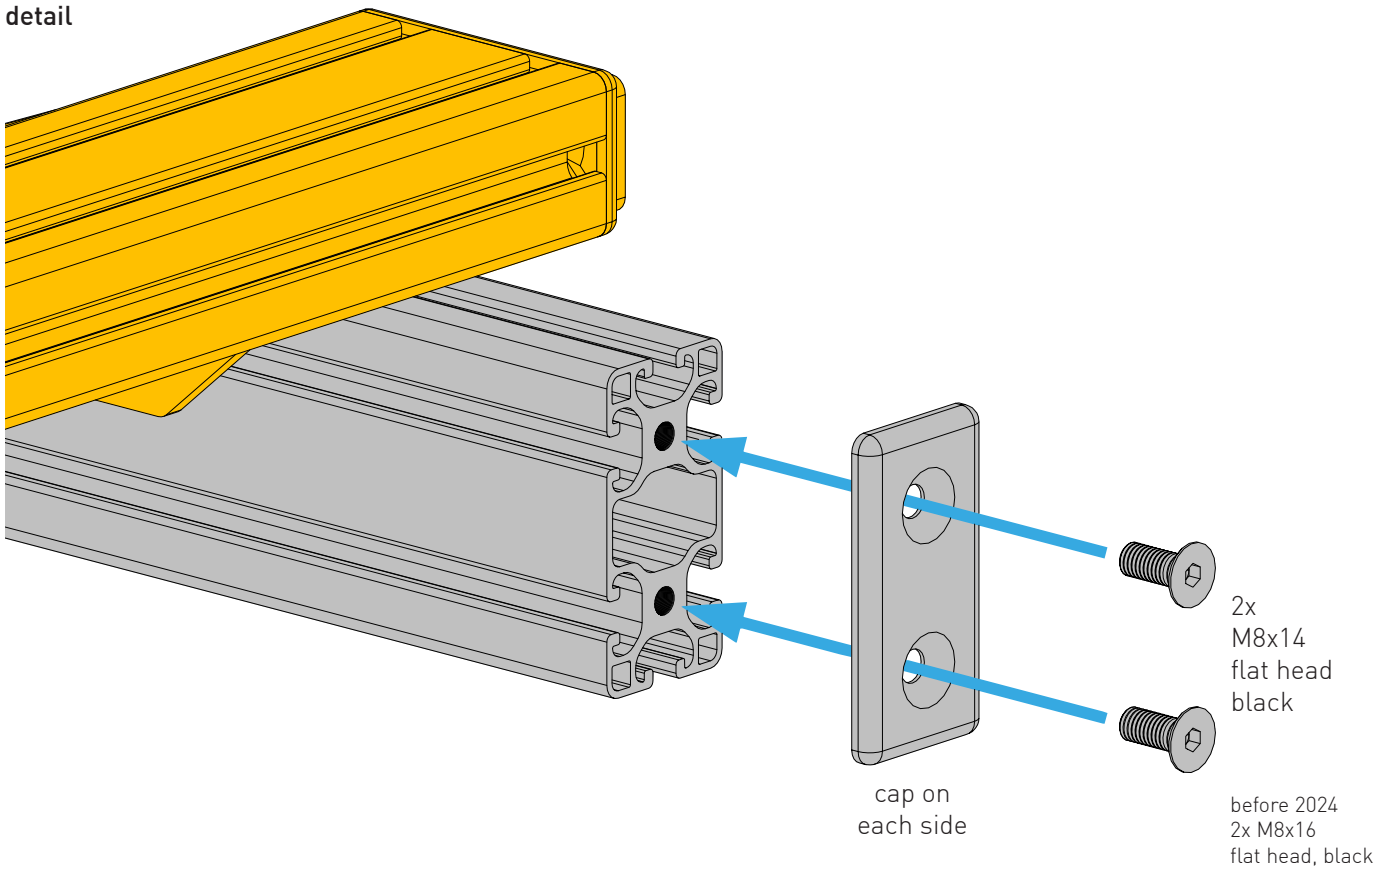


# ASSEMBLING A BRUNNER YOKE

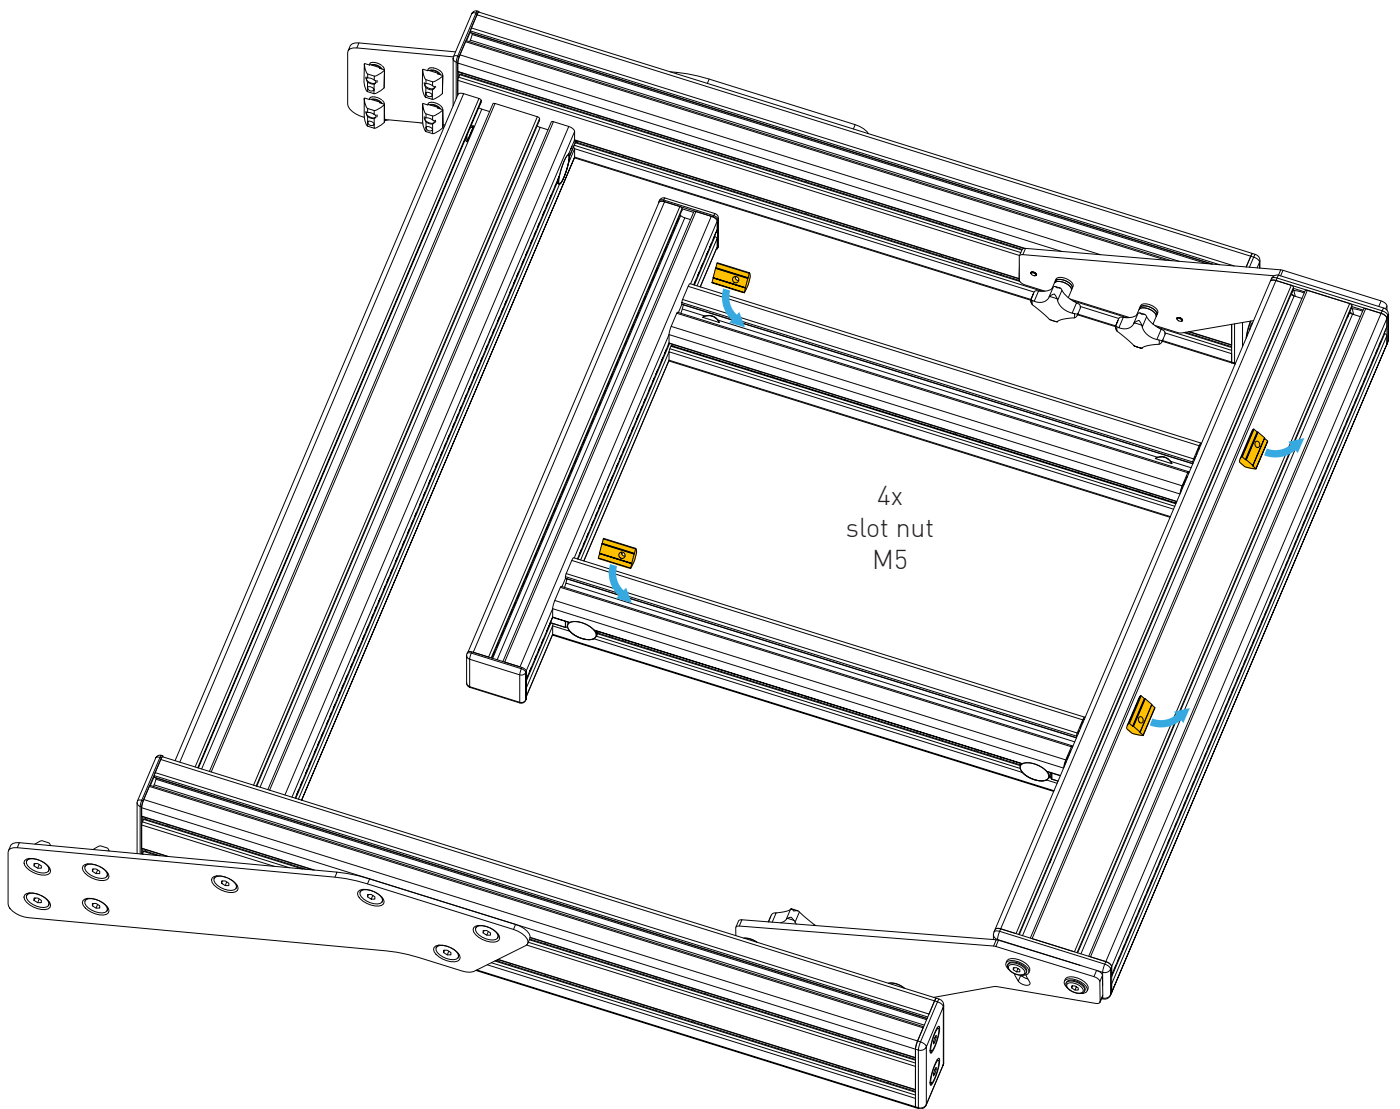

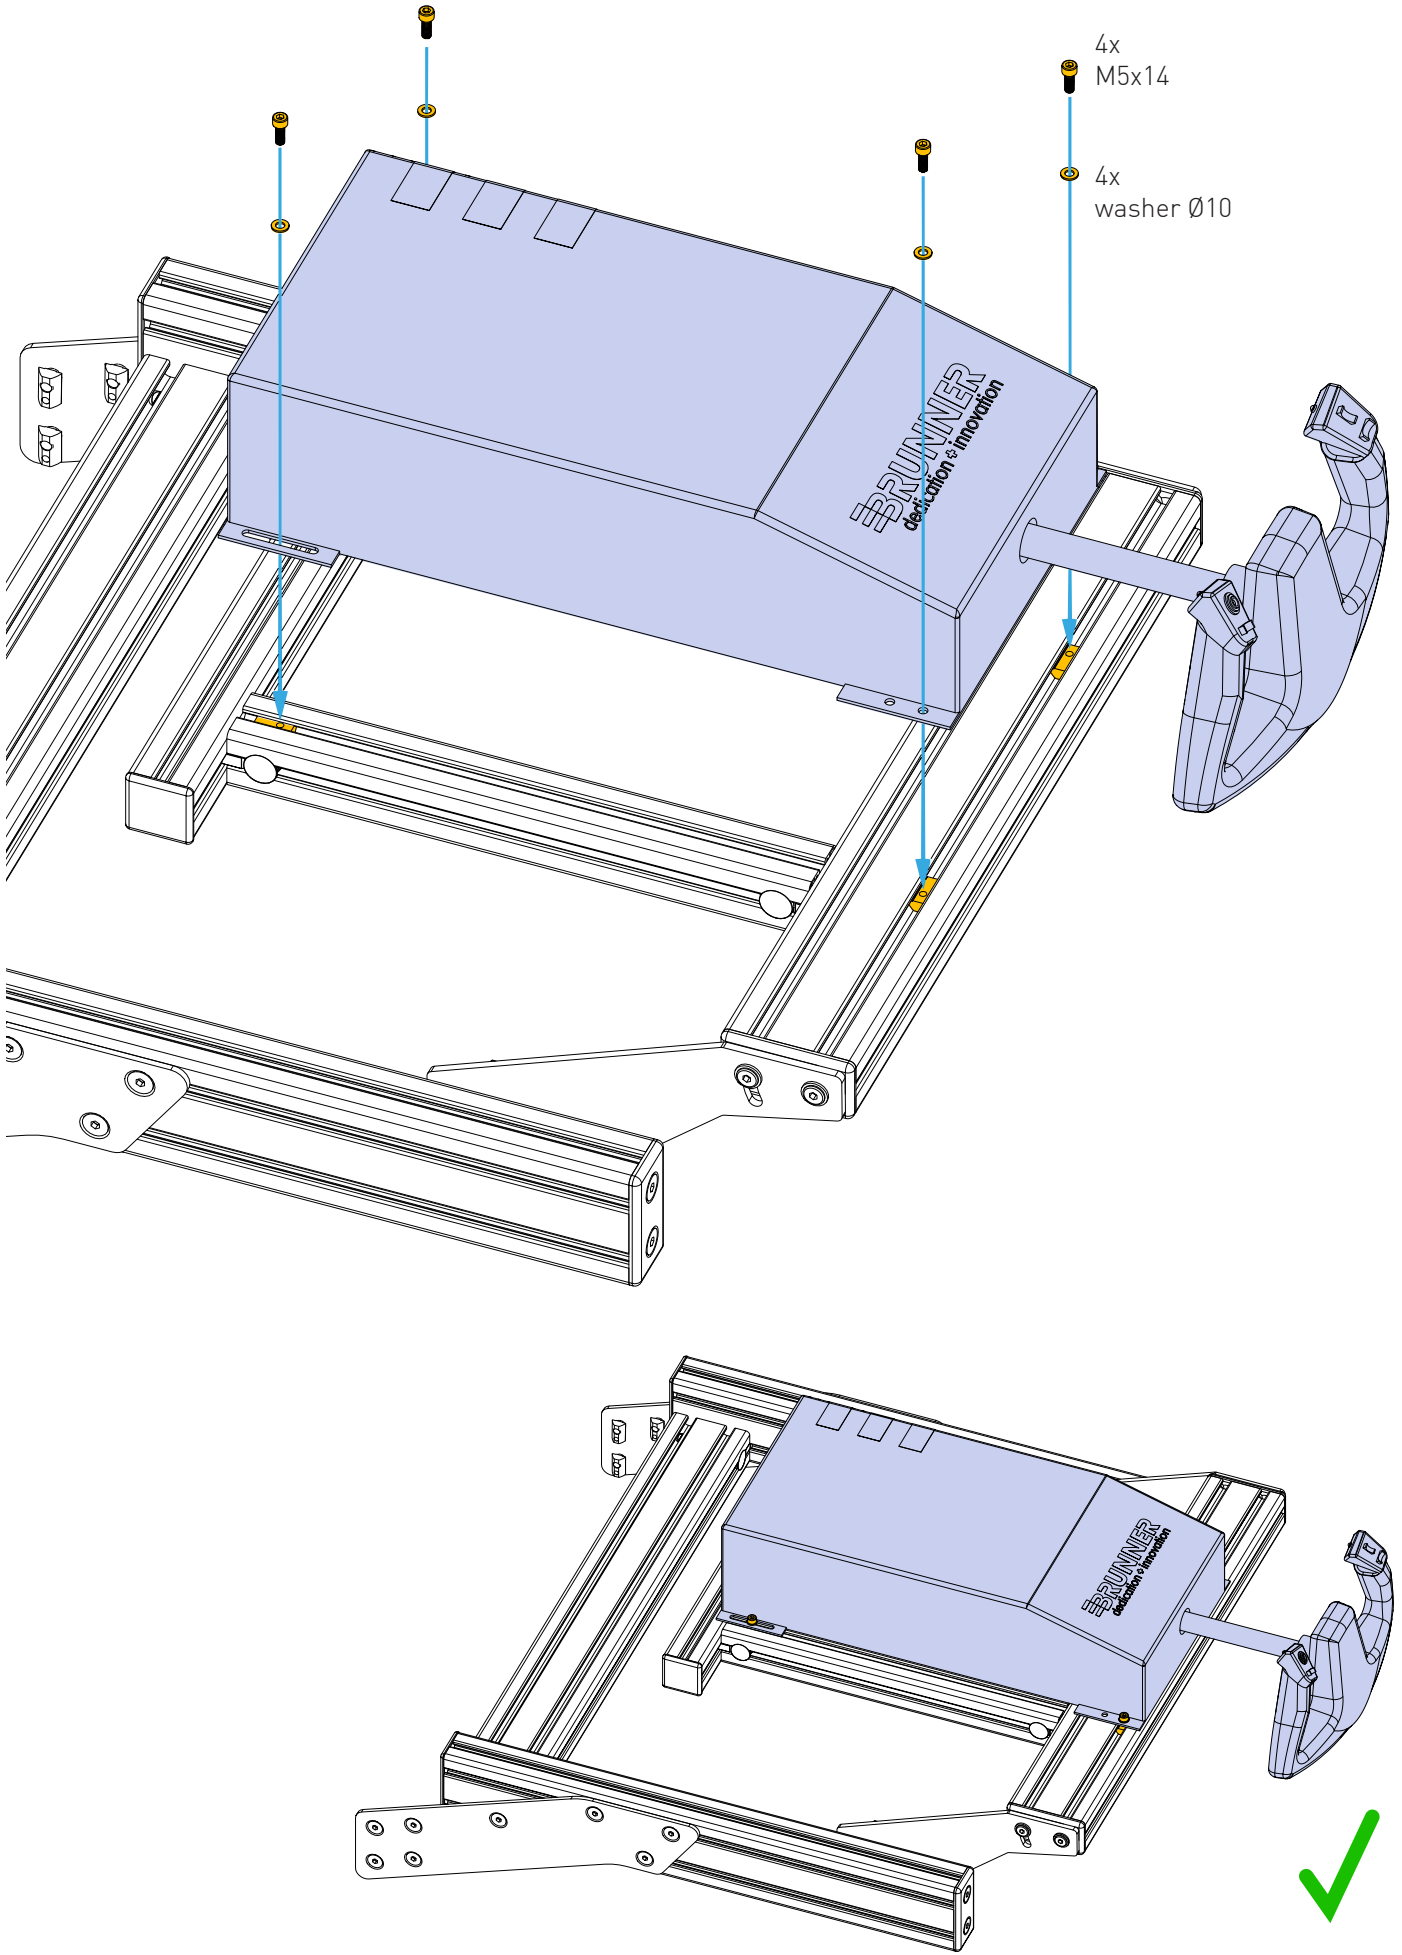





# UNIVERSAL ASSEMBLING WITH BRACKETS



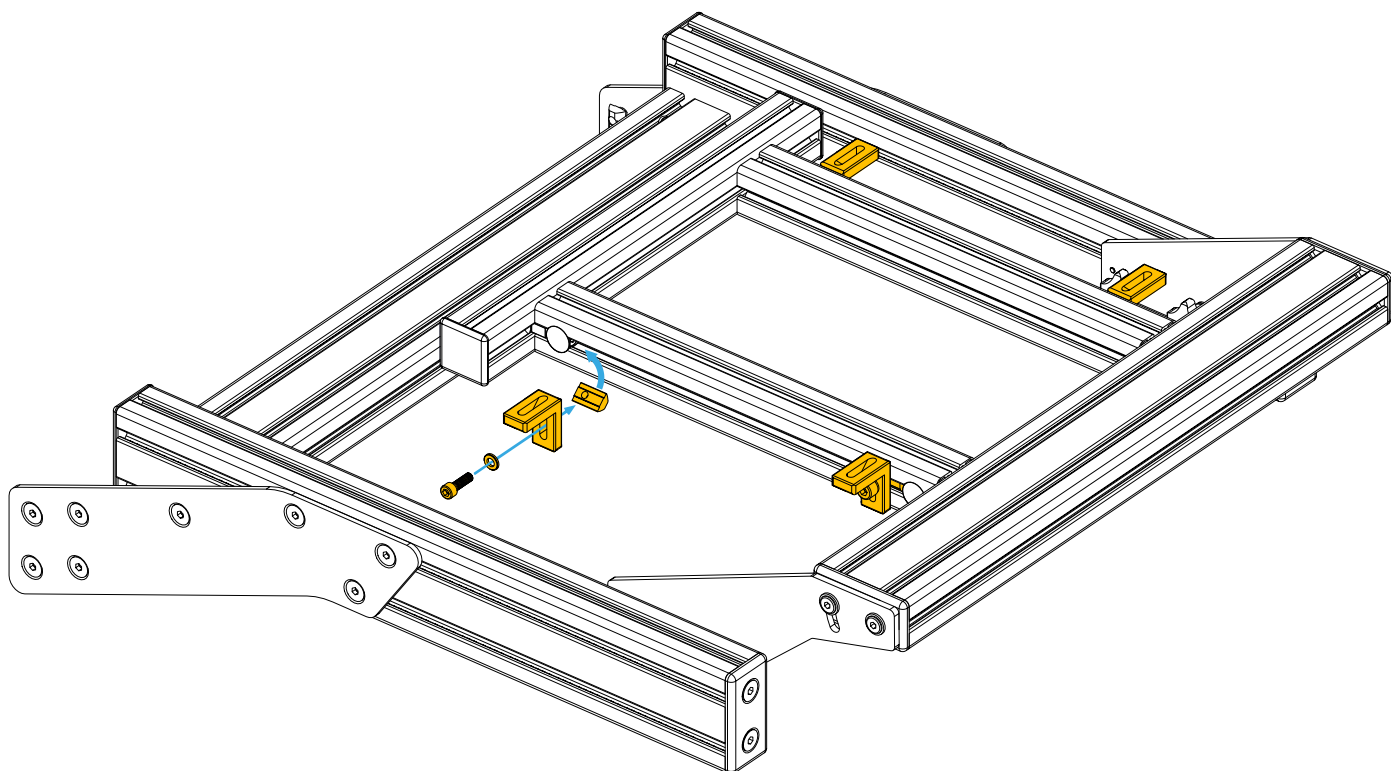


detail view

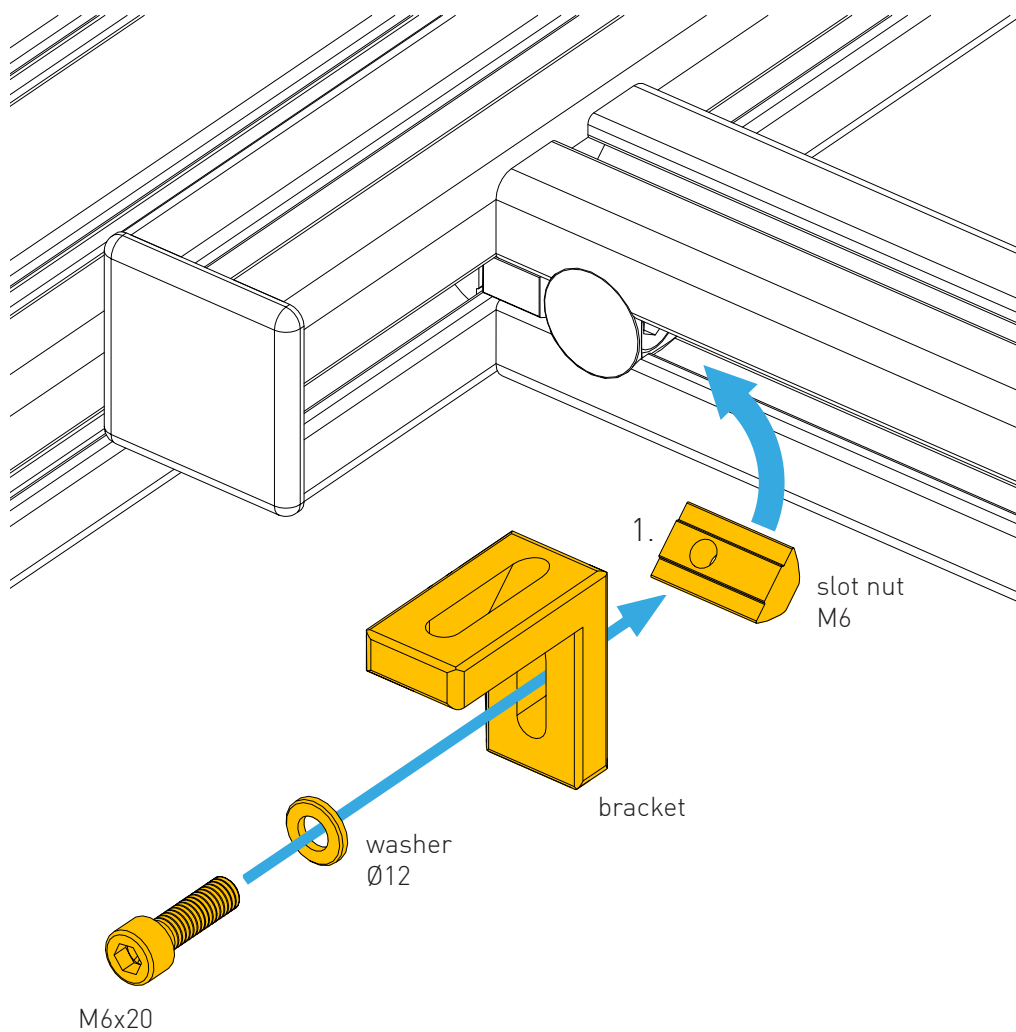

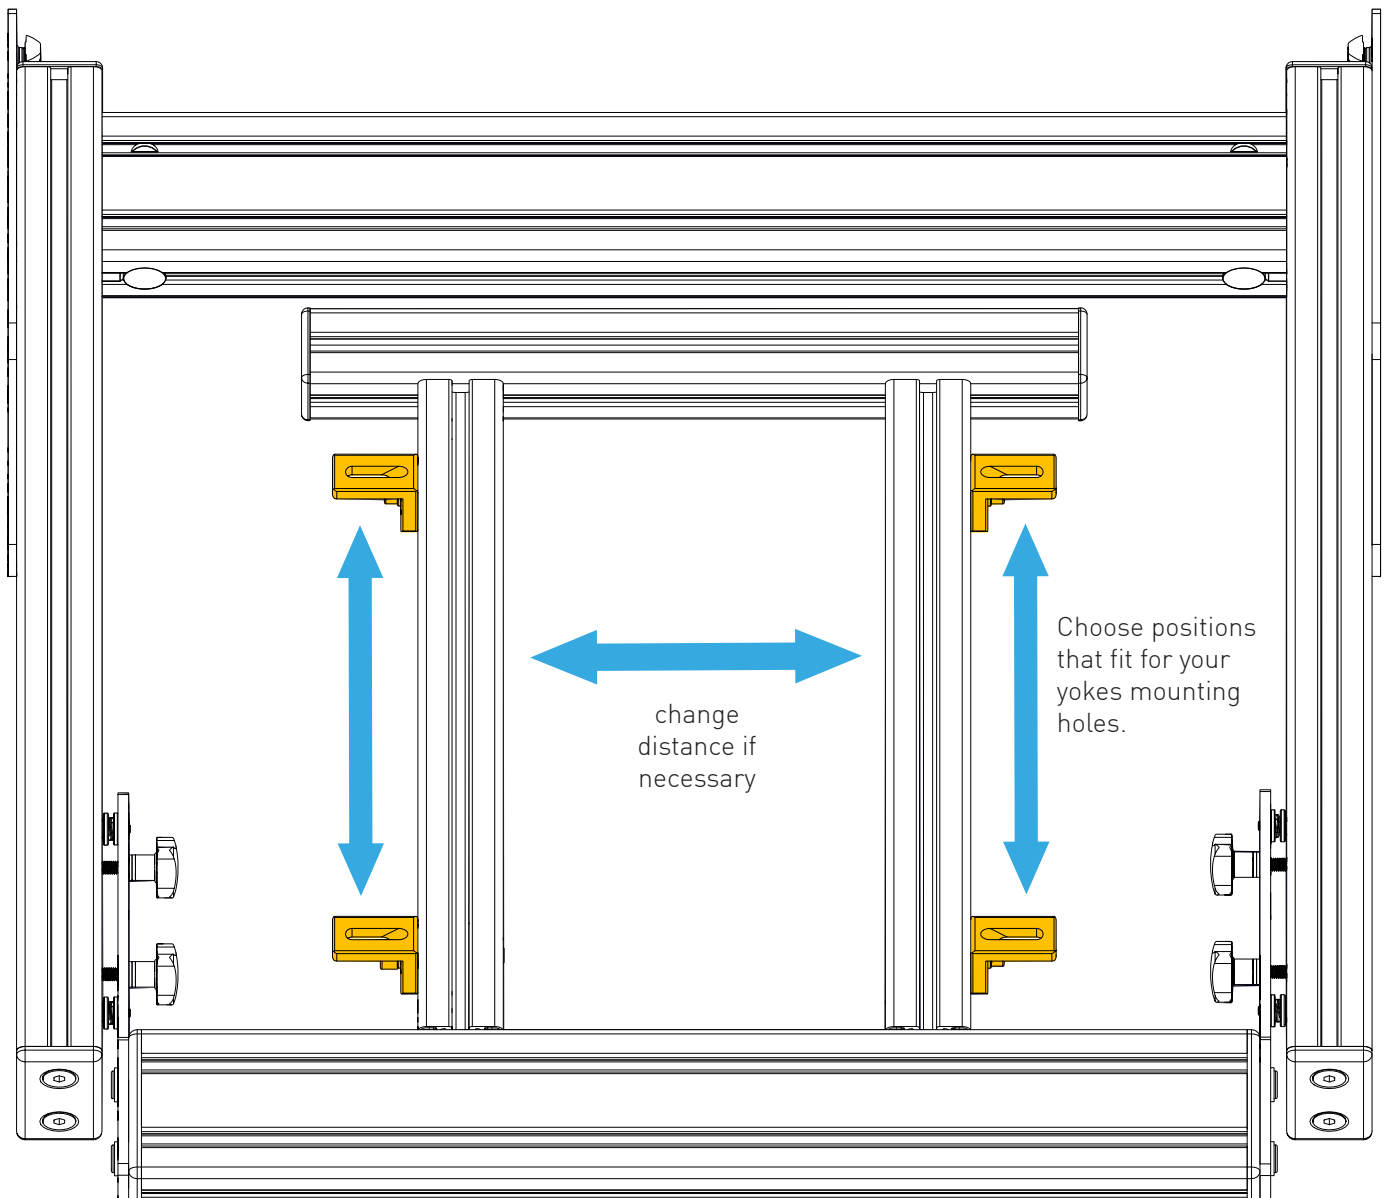

Alternative positions for the brackets

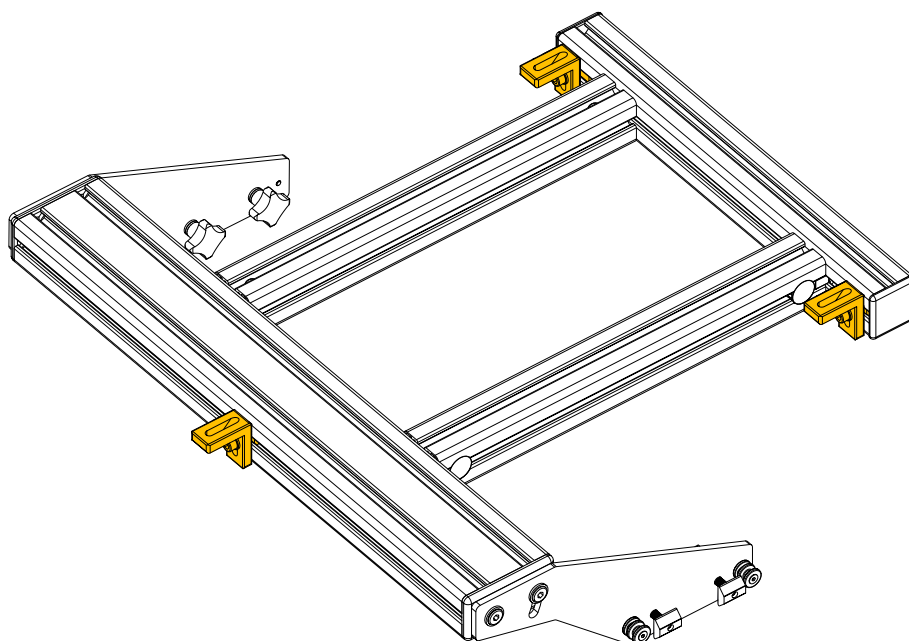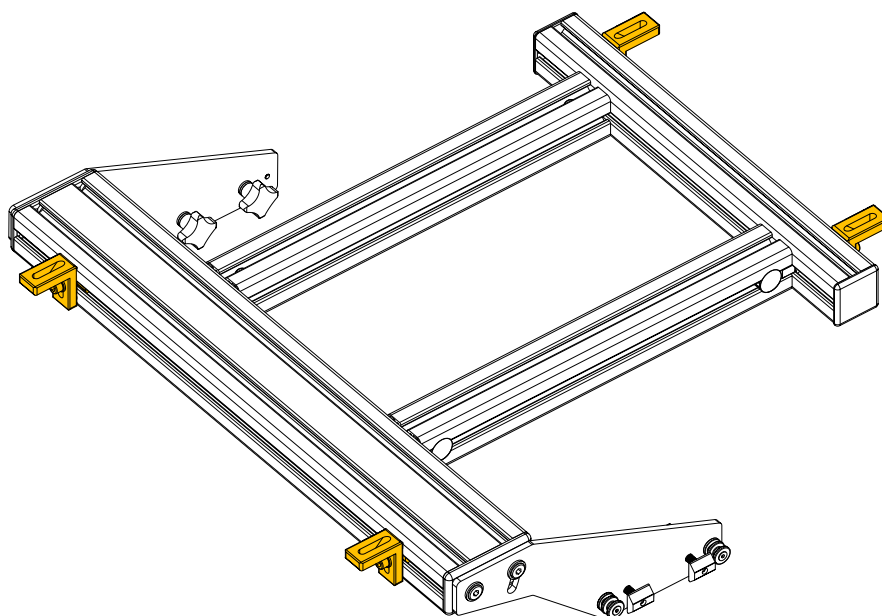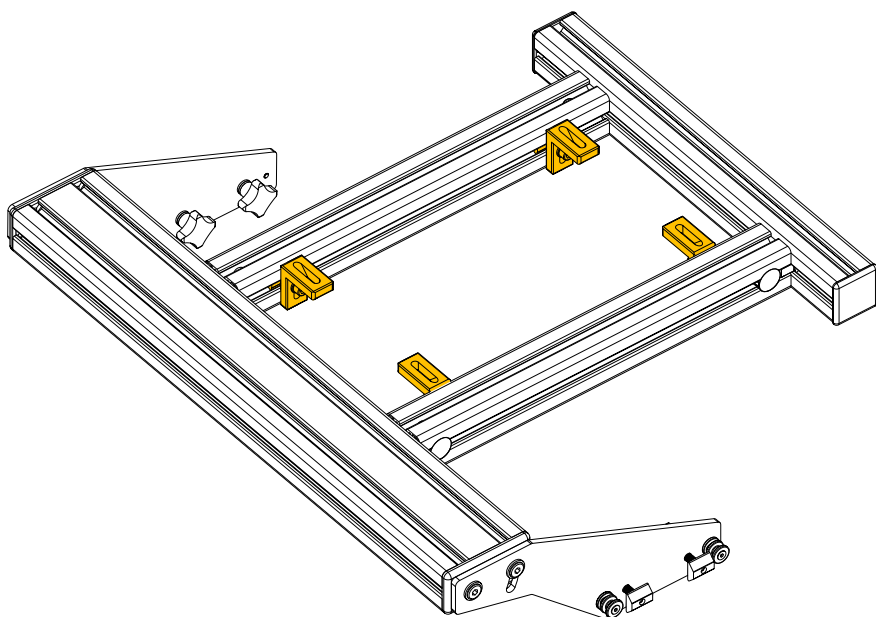

# OPERATION

